


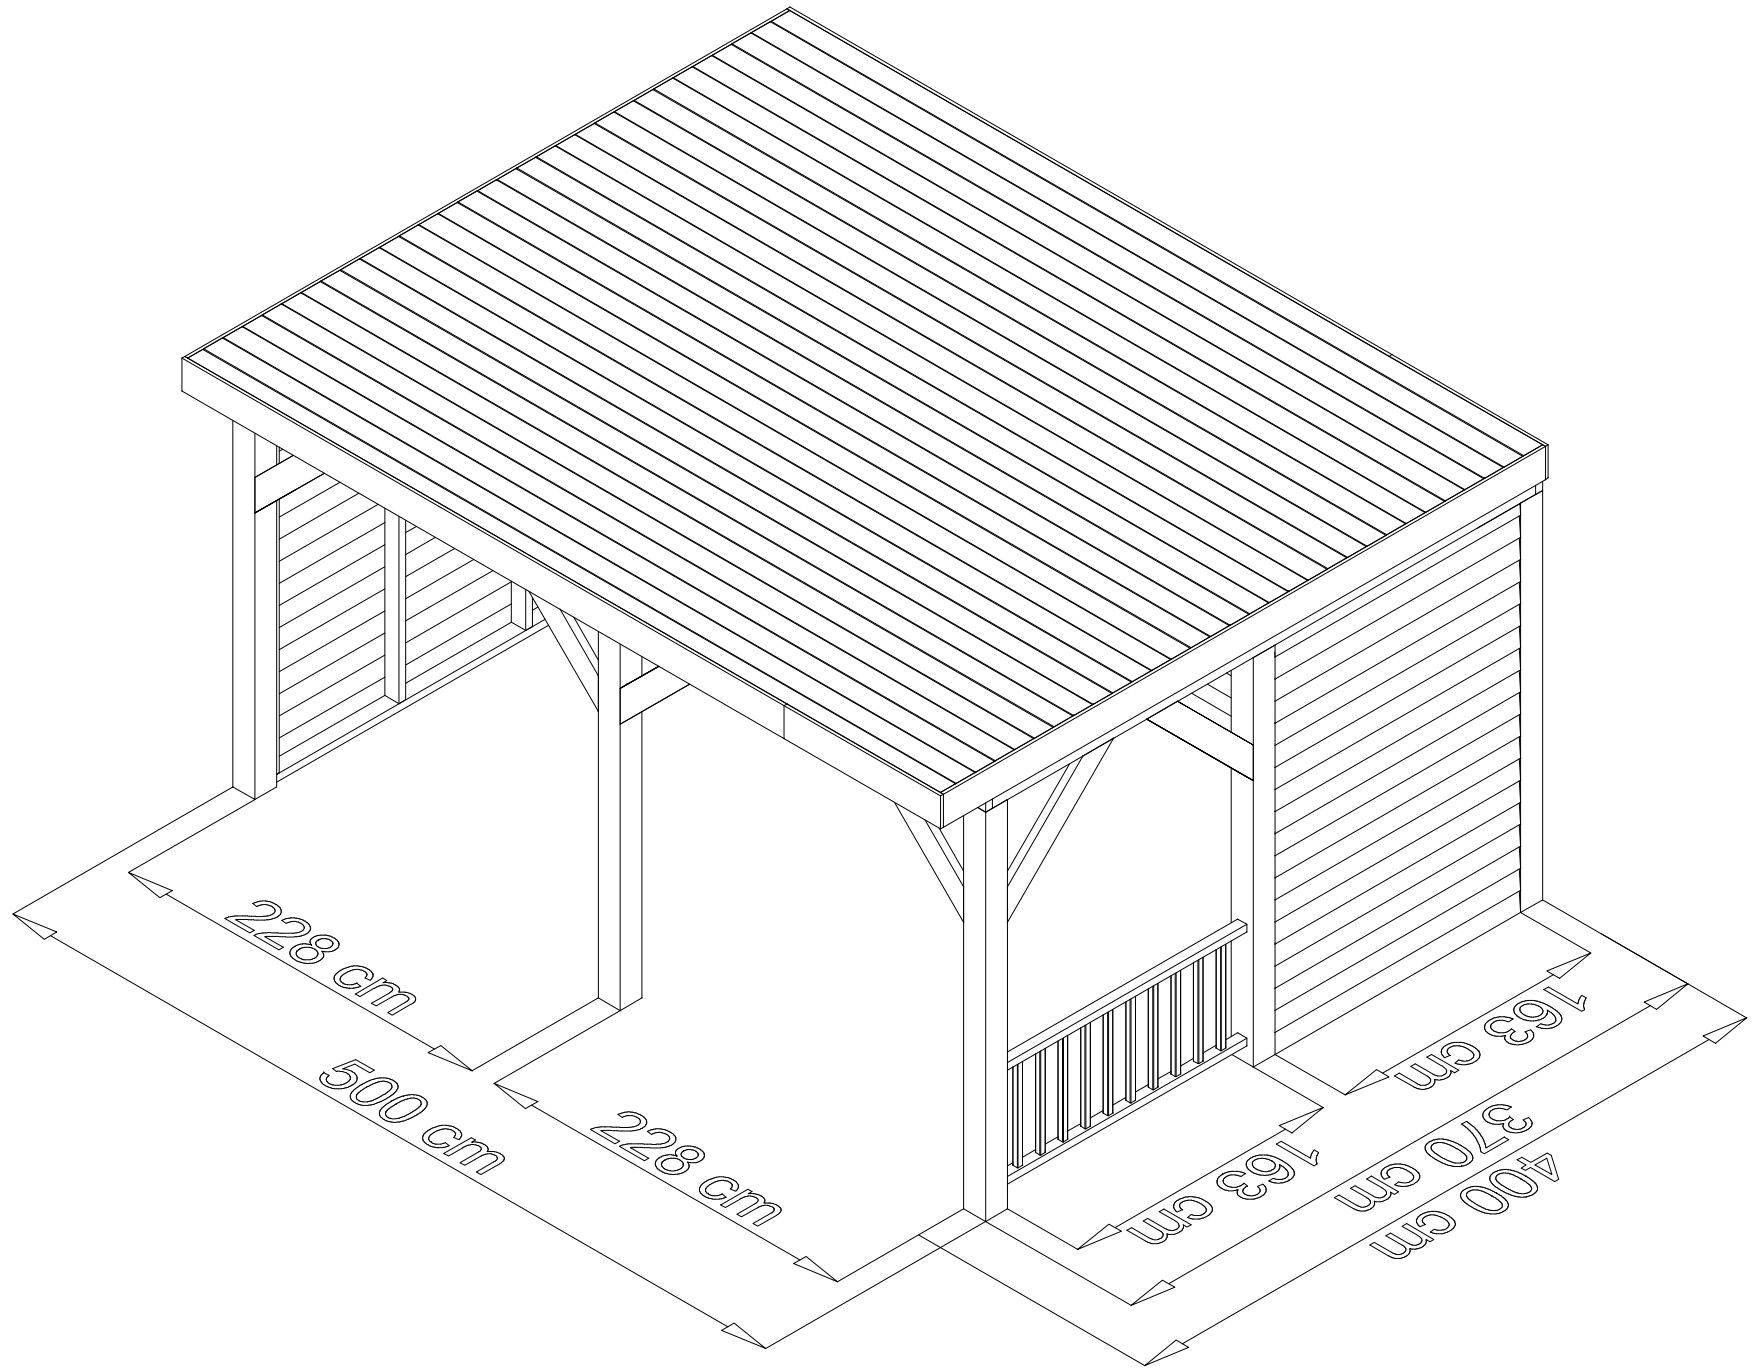
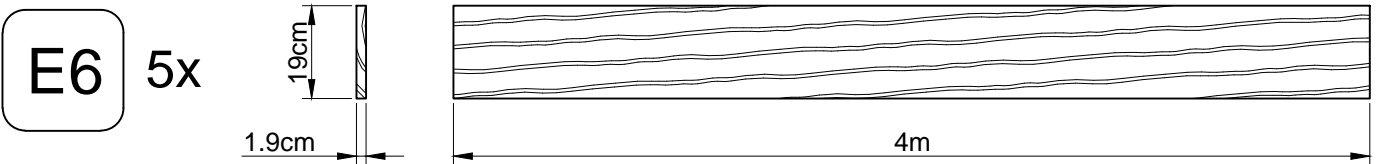
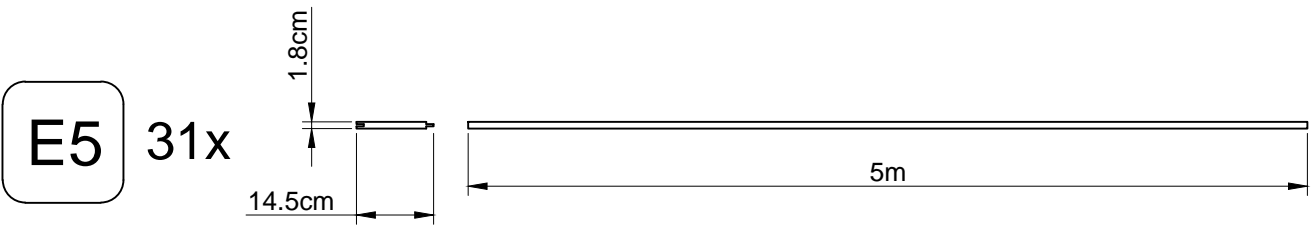
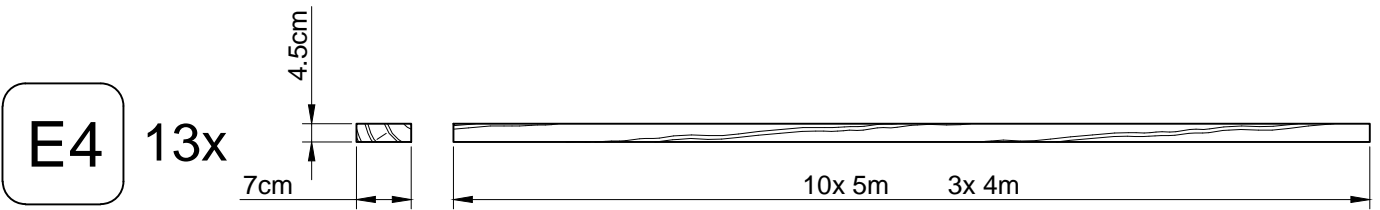
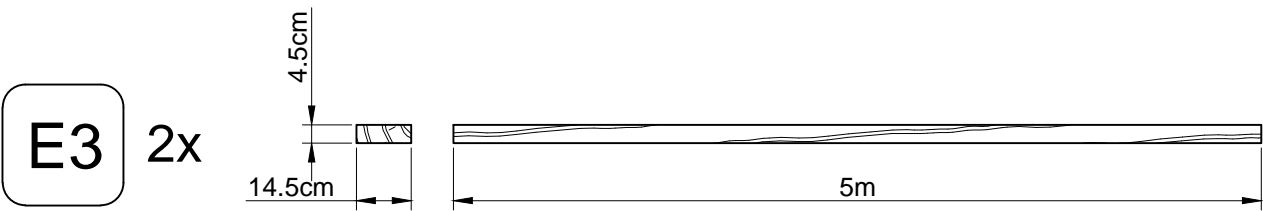
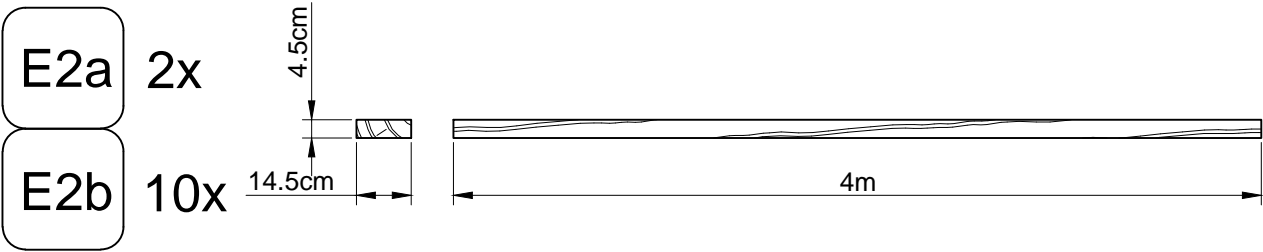



Montážní návod - Tuindecó Wezep

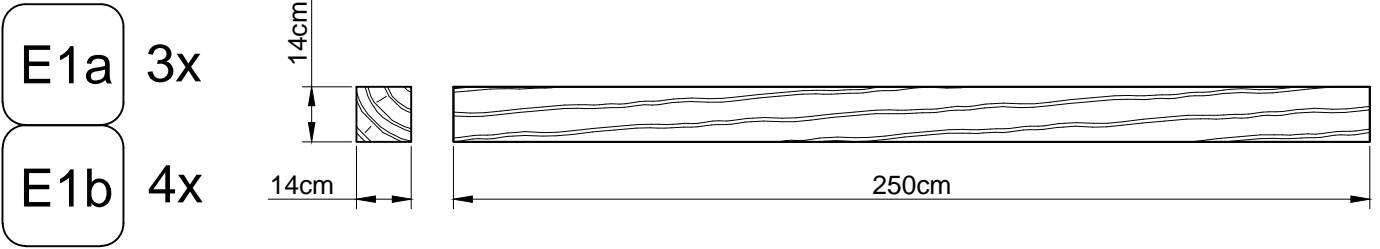

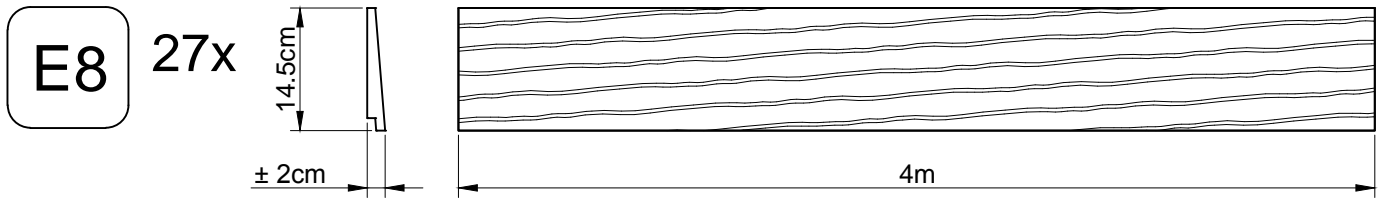

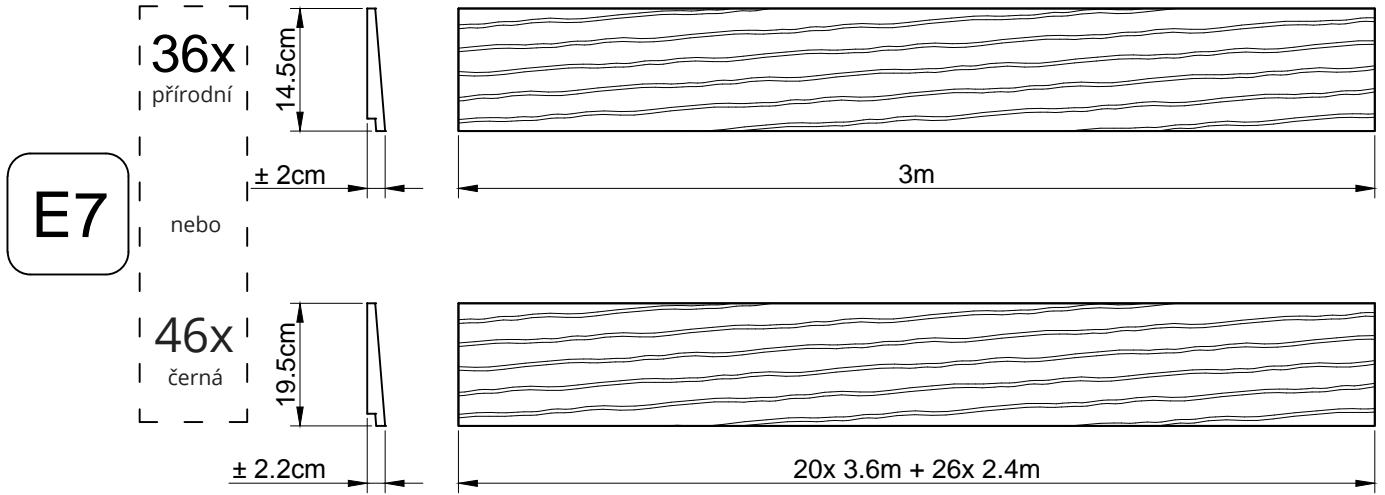


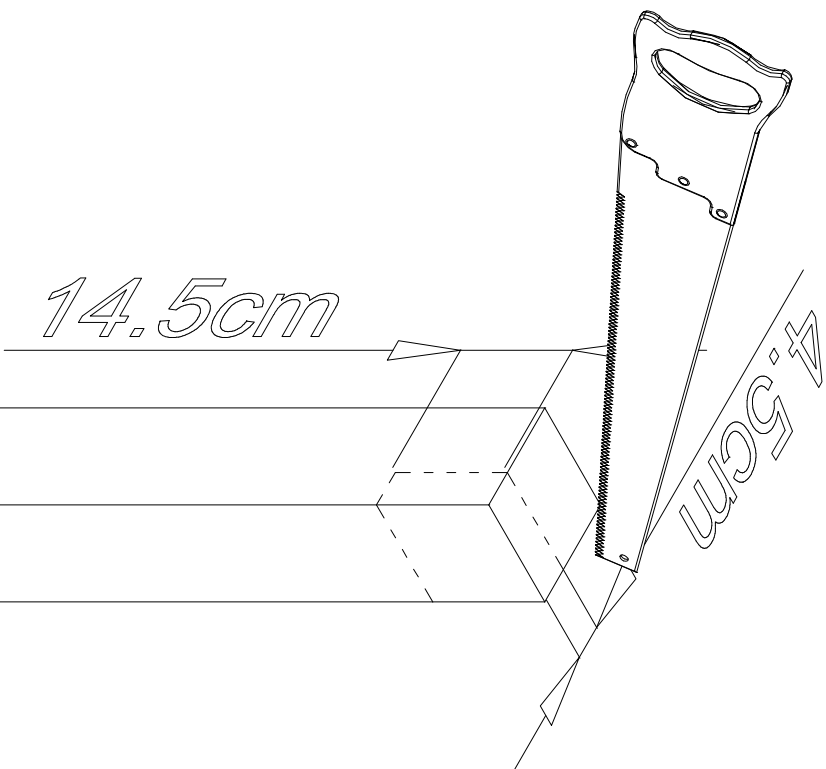
2x  Ø5x90
100pcs

20x  Ø6x200

22x  Ø8x100



8x  Ø4x40
100pcs

1




3X
E1a

2

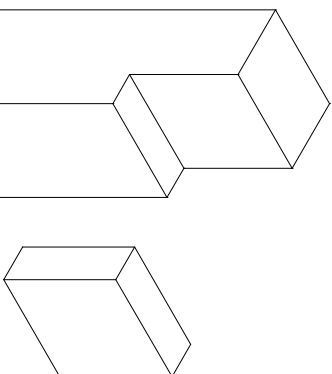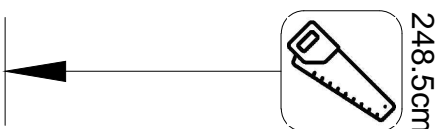


1

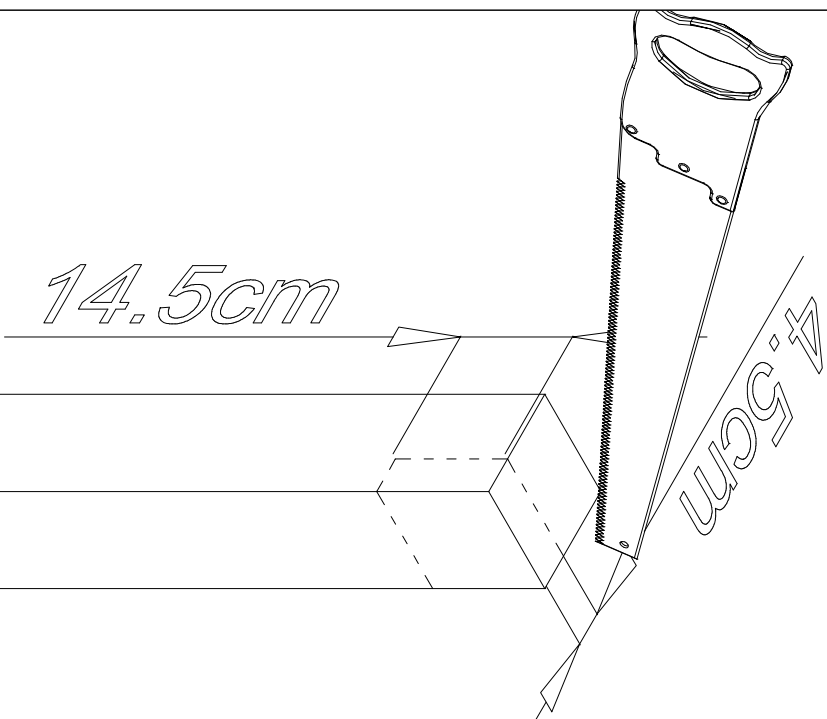




4X

E1b

2

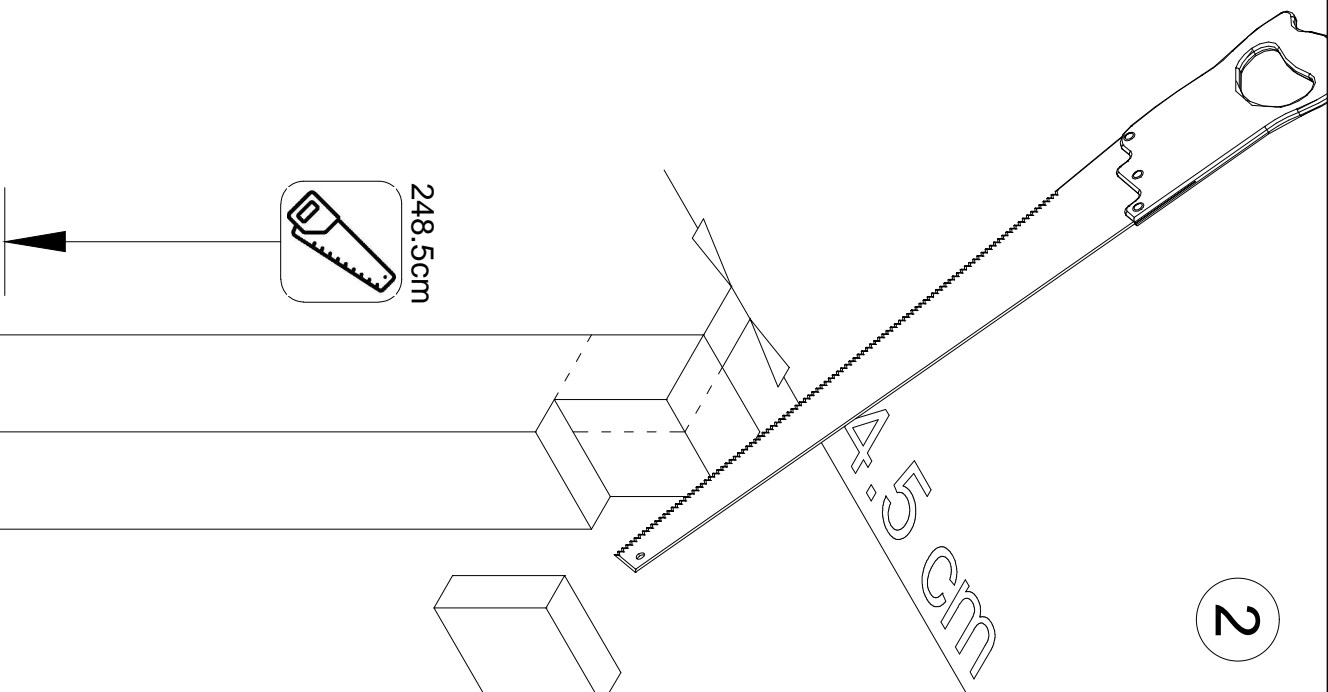

3

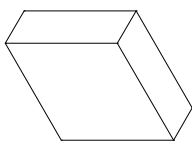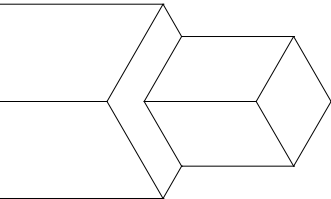

2x E2a

2x E3


248.5cm

22x



Ø6mm

Ø8x100

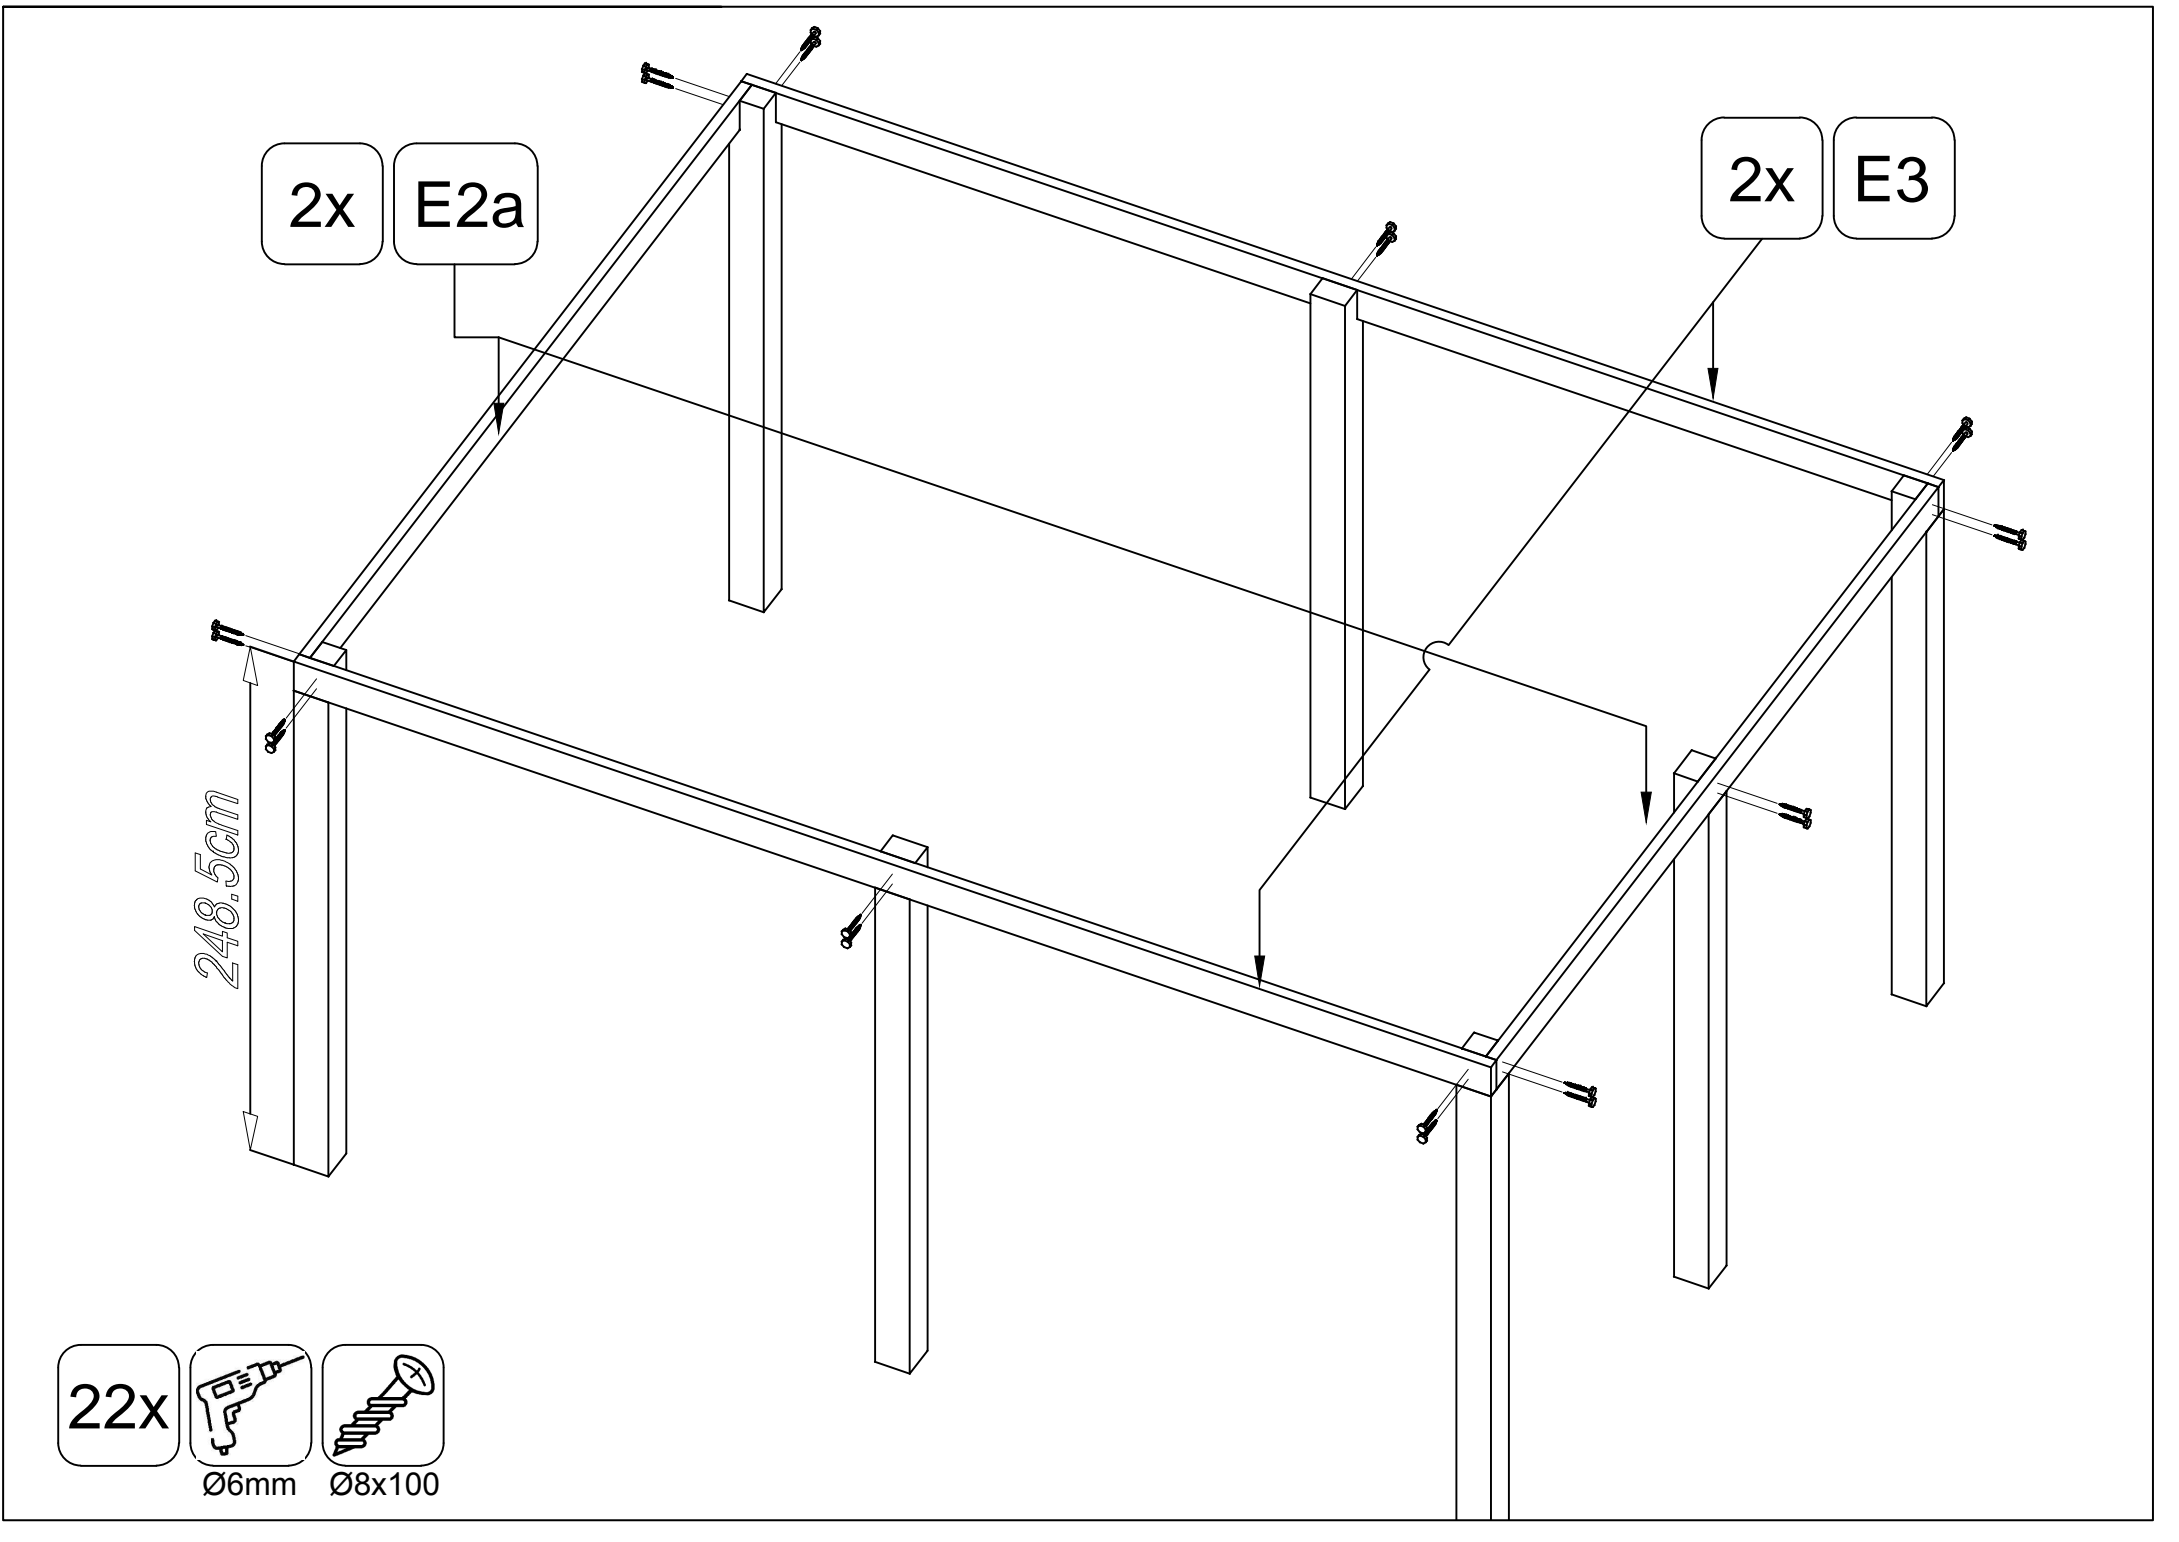

5x



E4



20x



Ø5x90

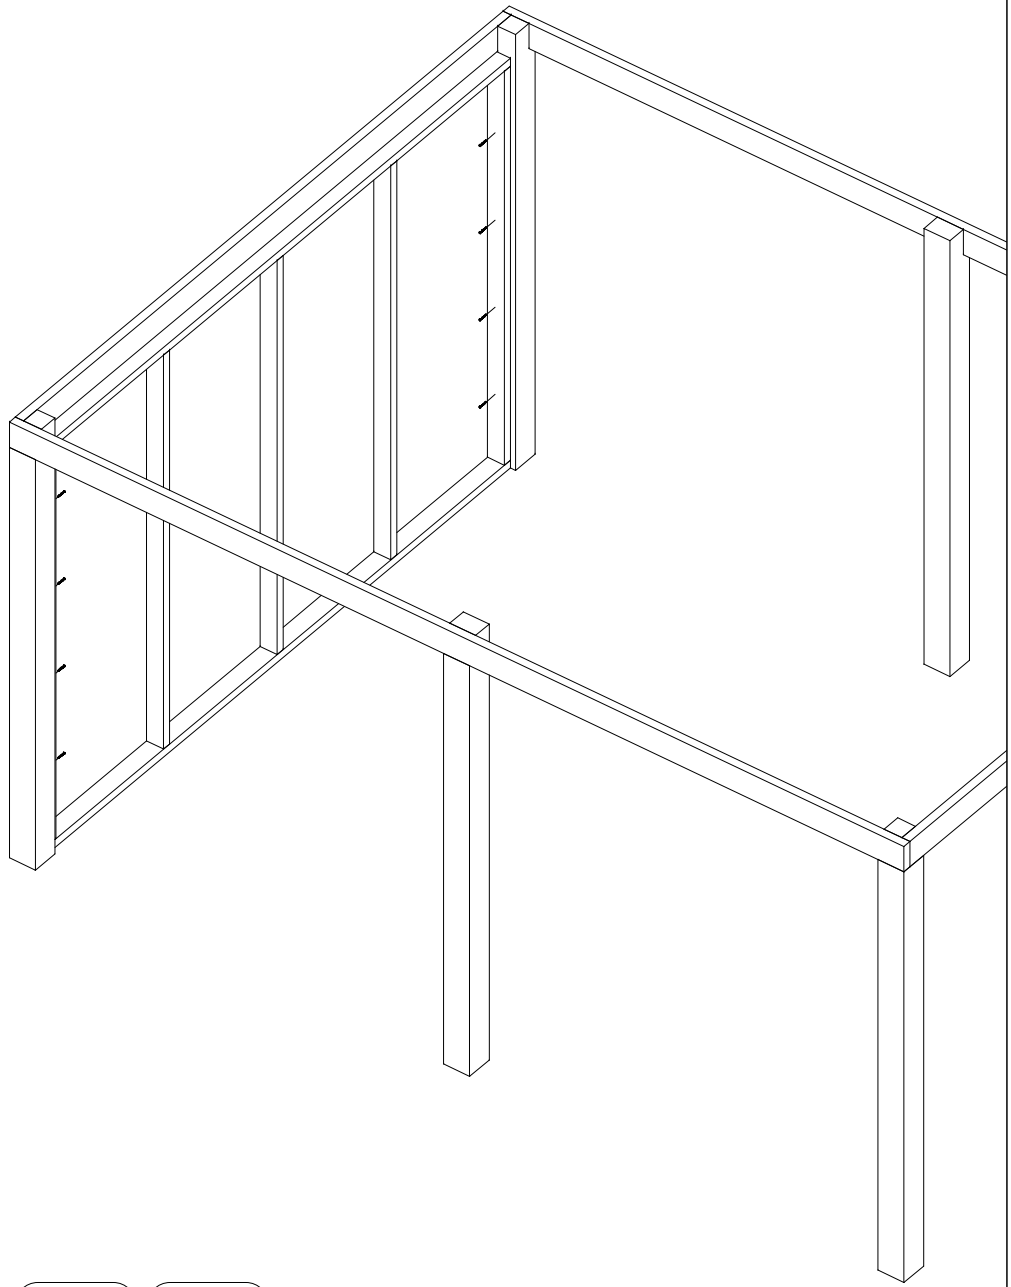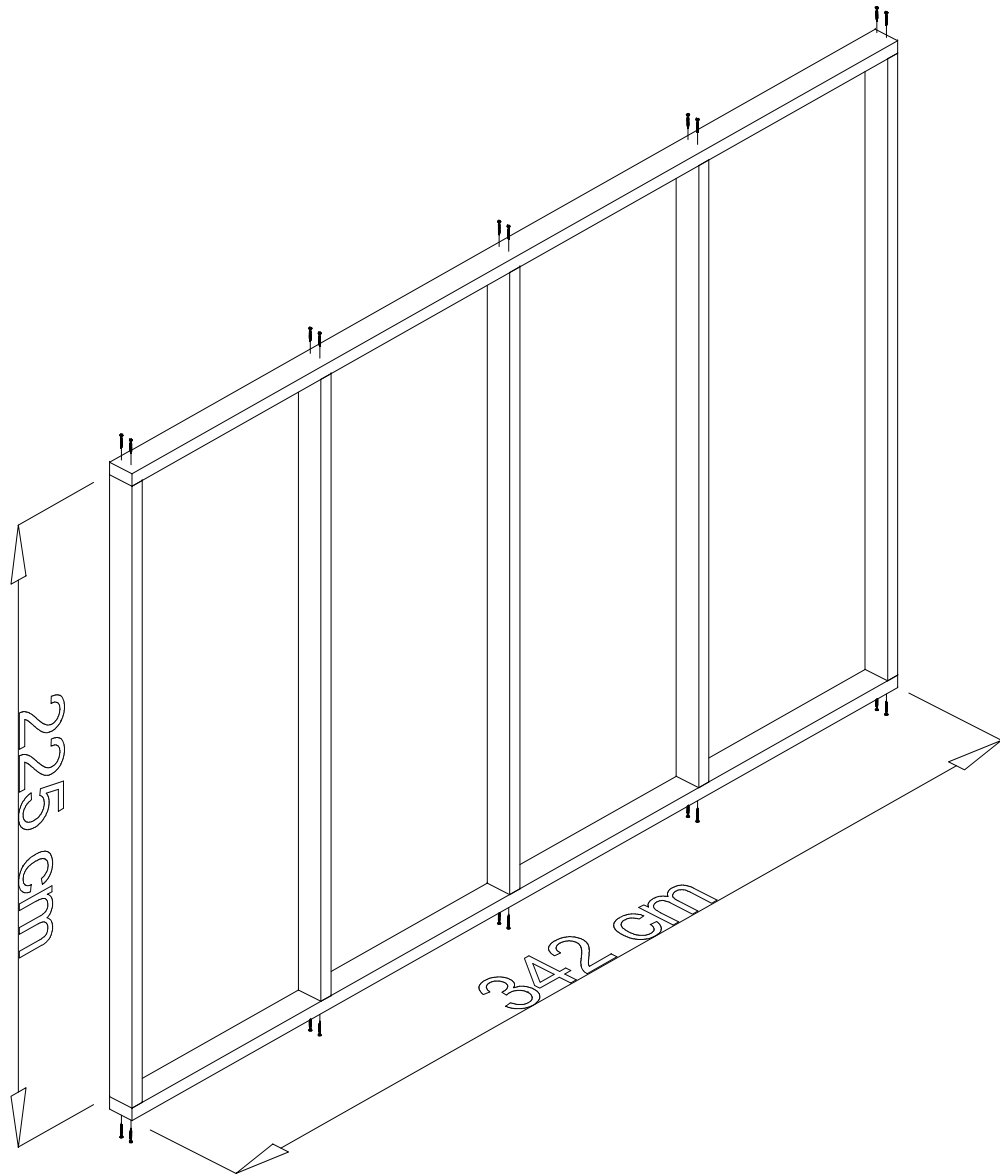

8x



Ø5x90

6x



E4



32x



Ø5x90

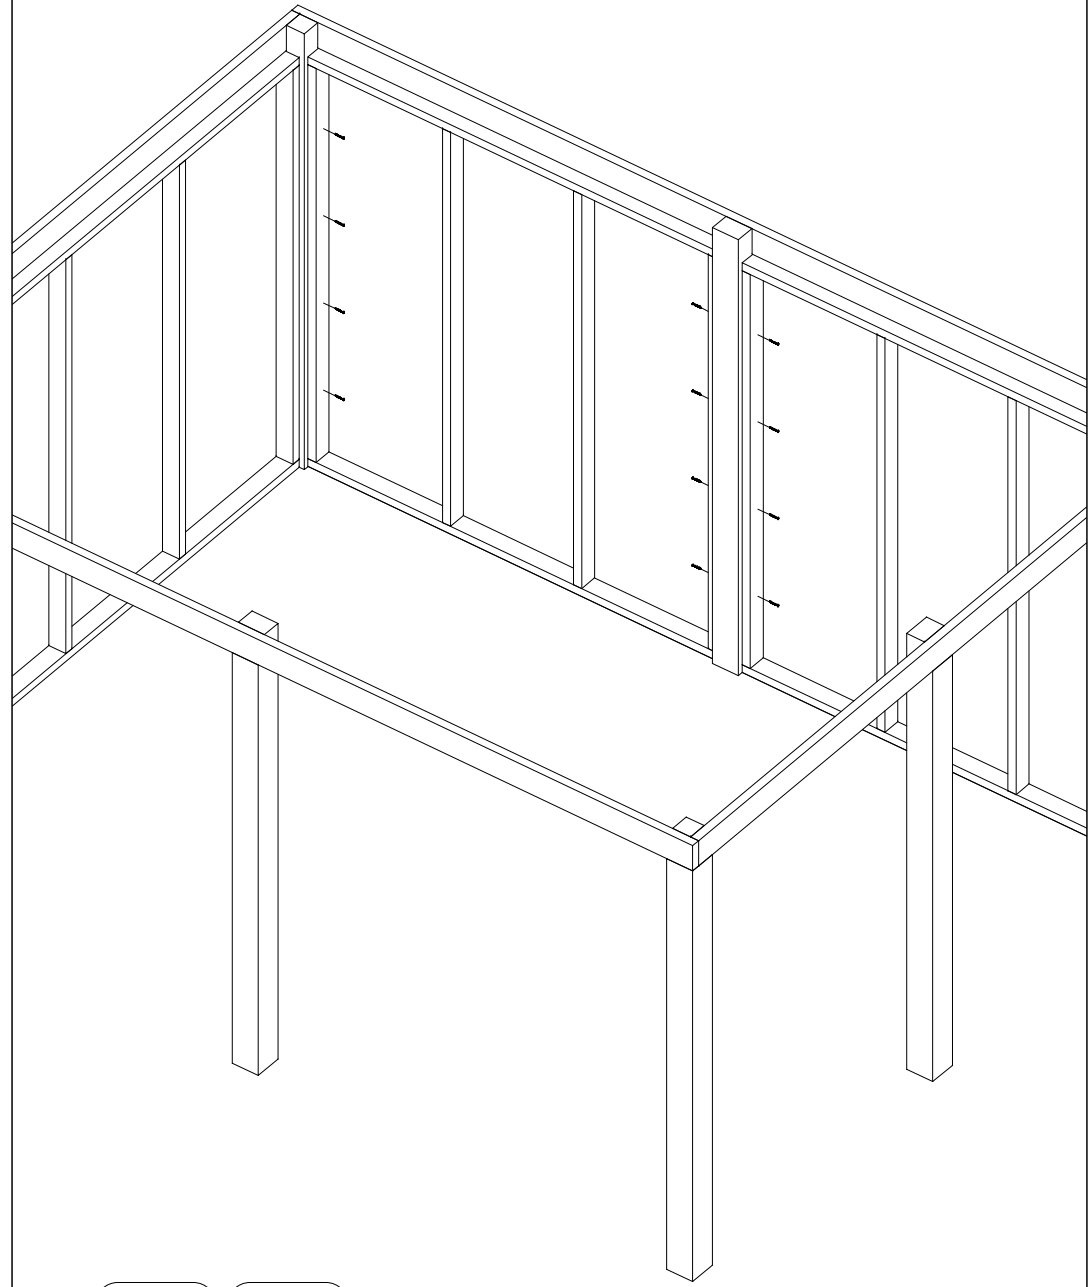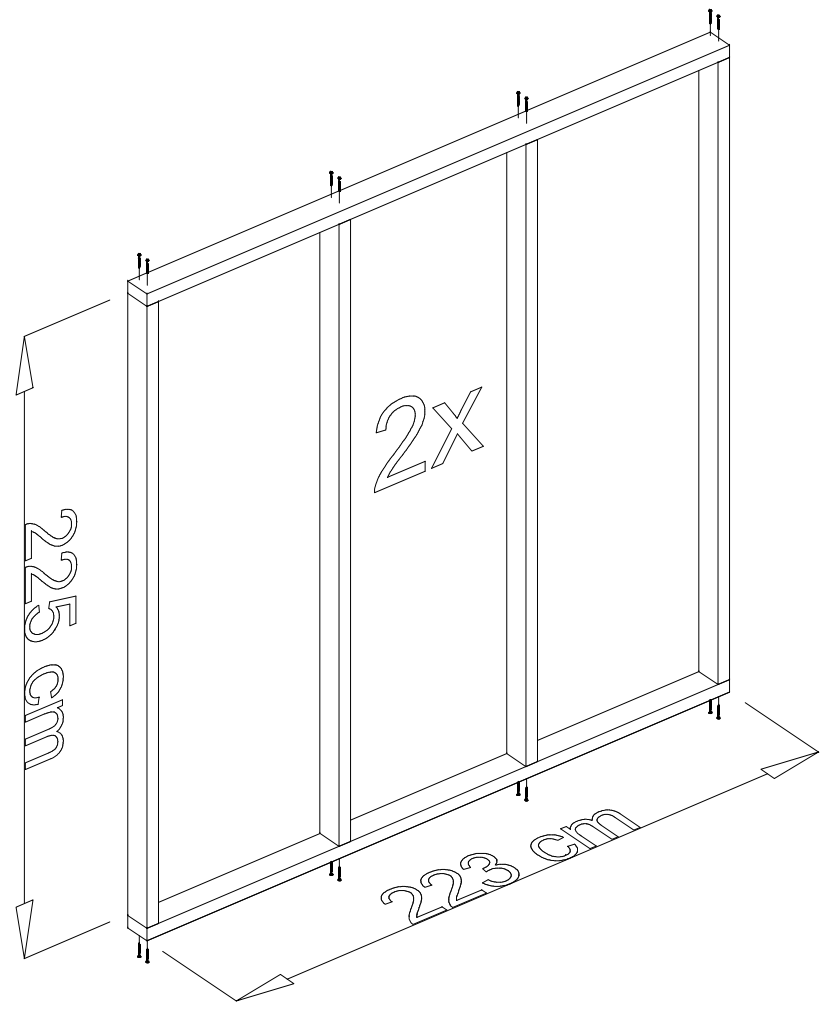

16x



Ø5x90

2x



E4



12x



Ø5x90

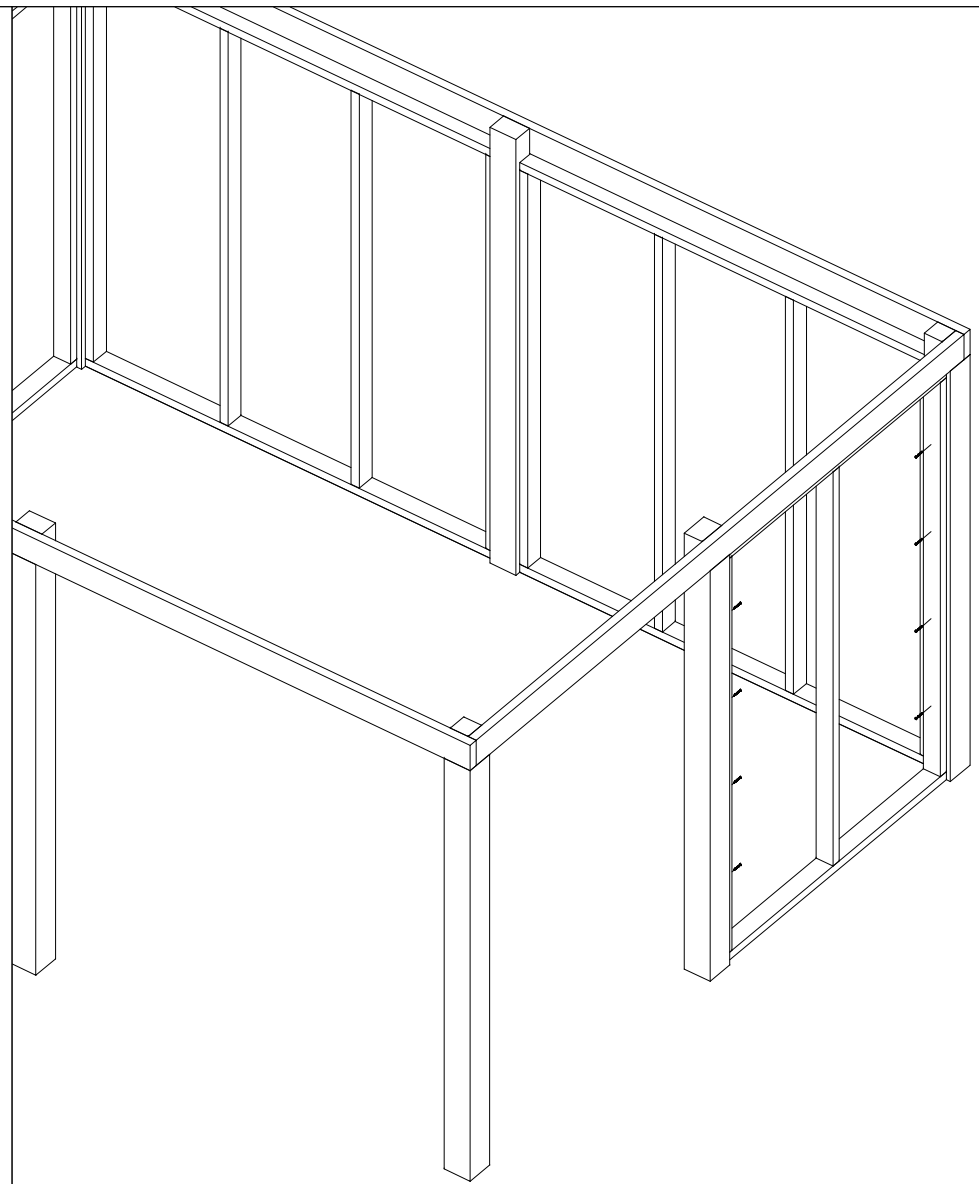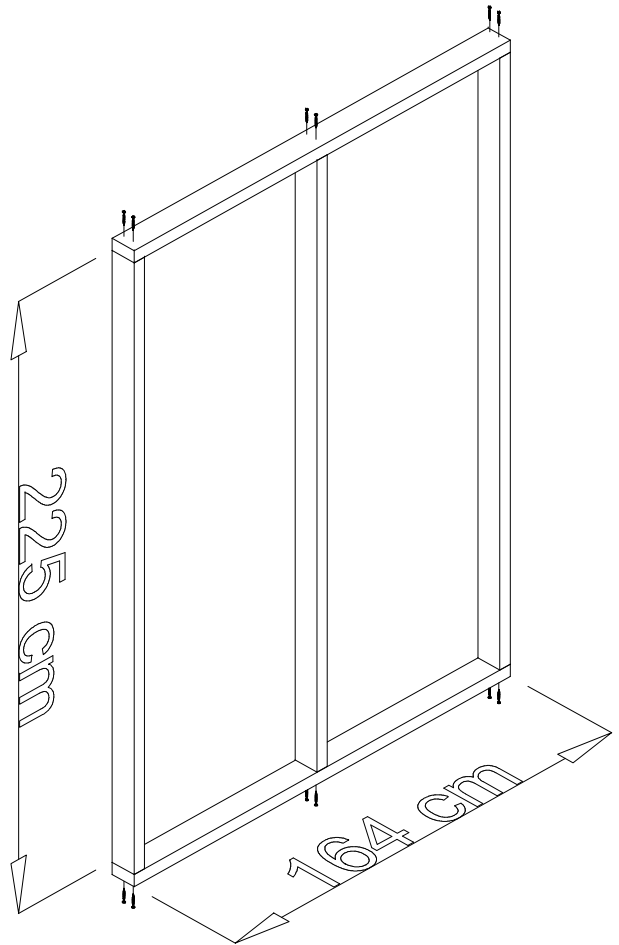


8x



Ø5x90

19x E8

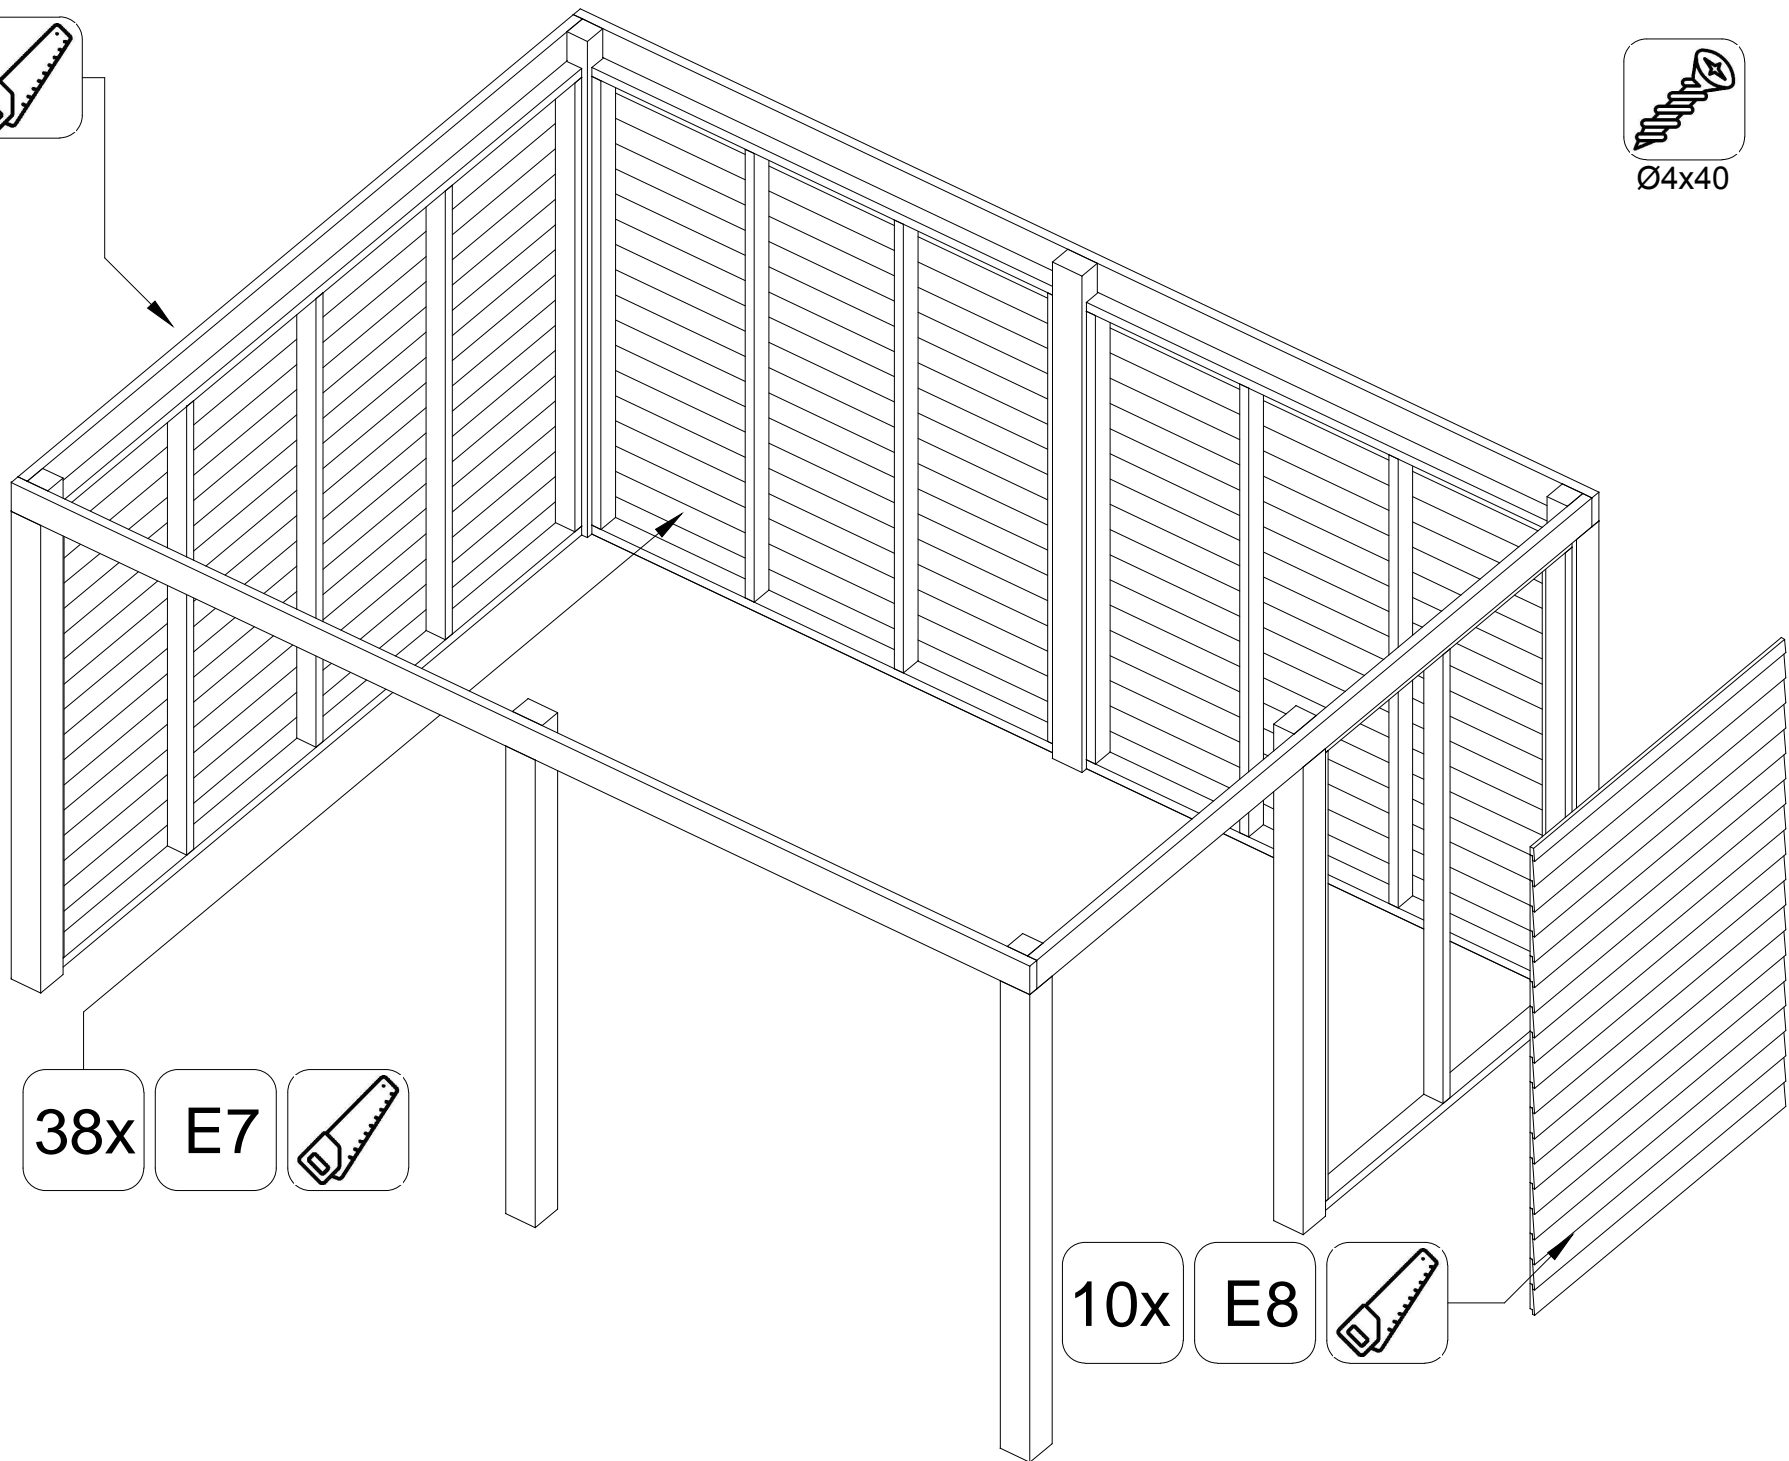

38x E7






10x E8





12x




Ø5x90

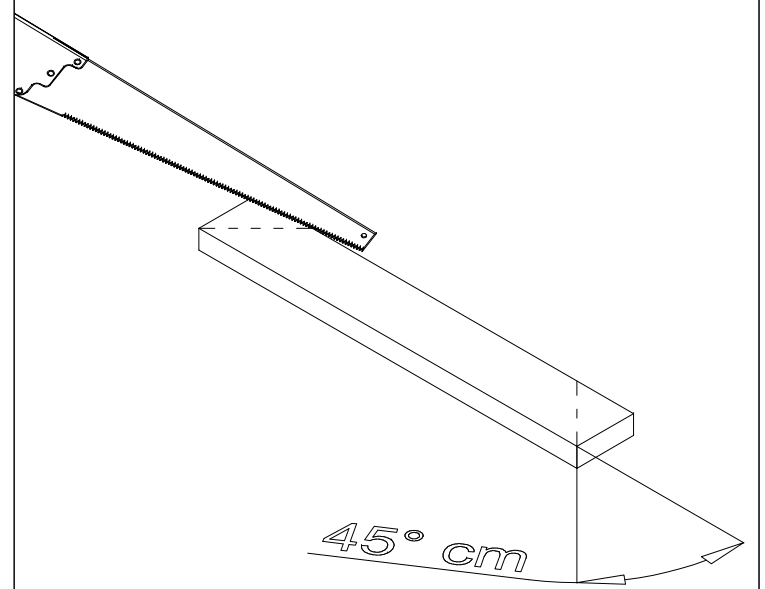
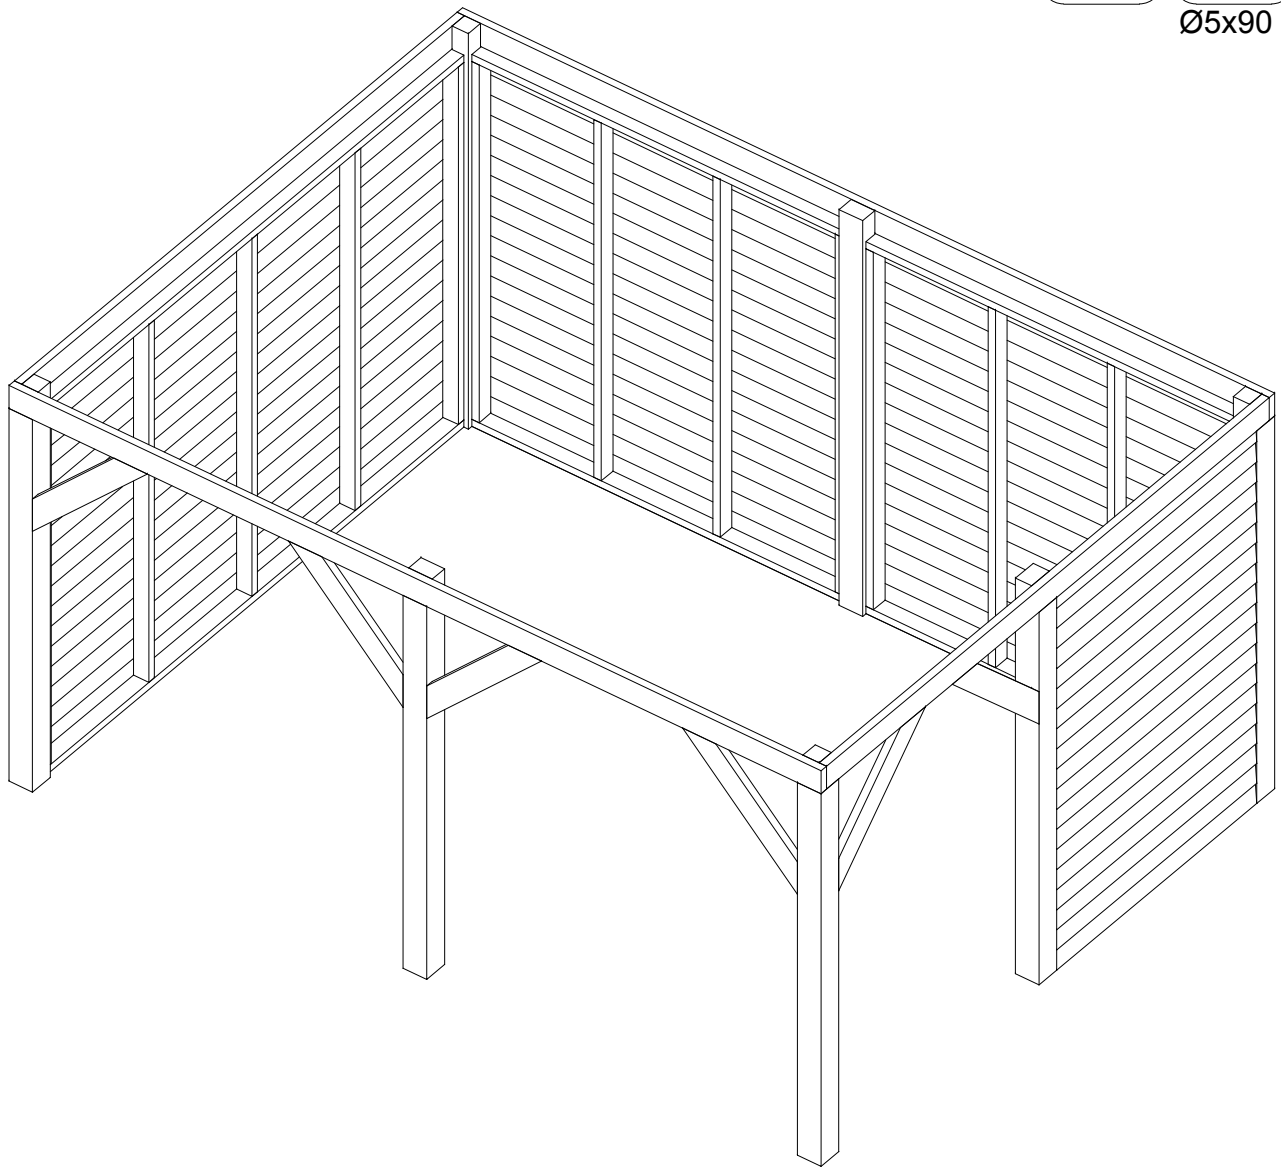
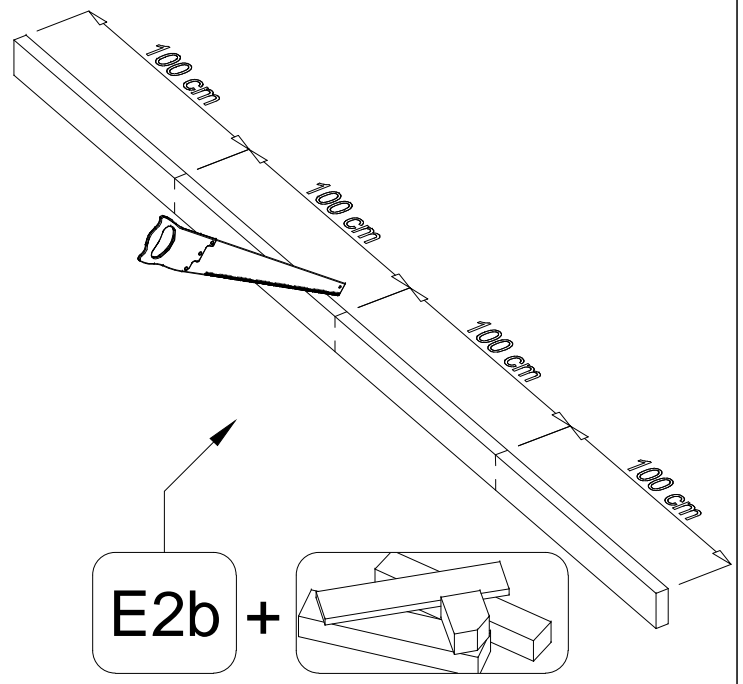



8x E2b

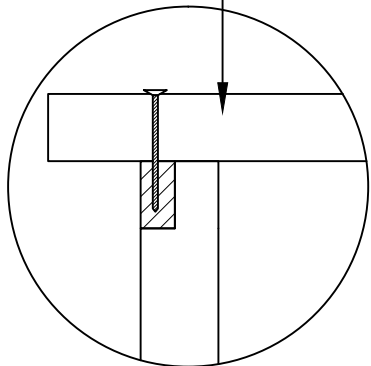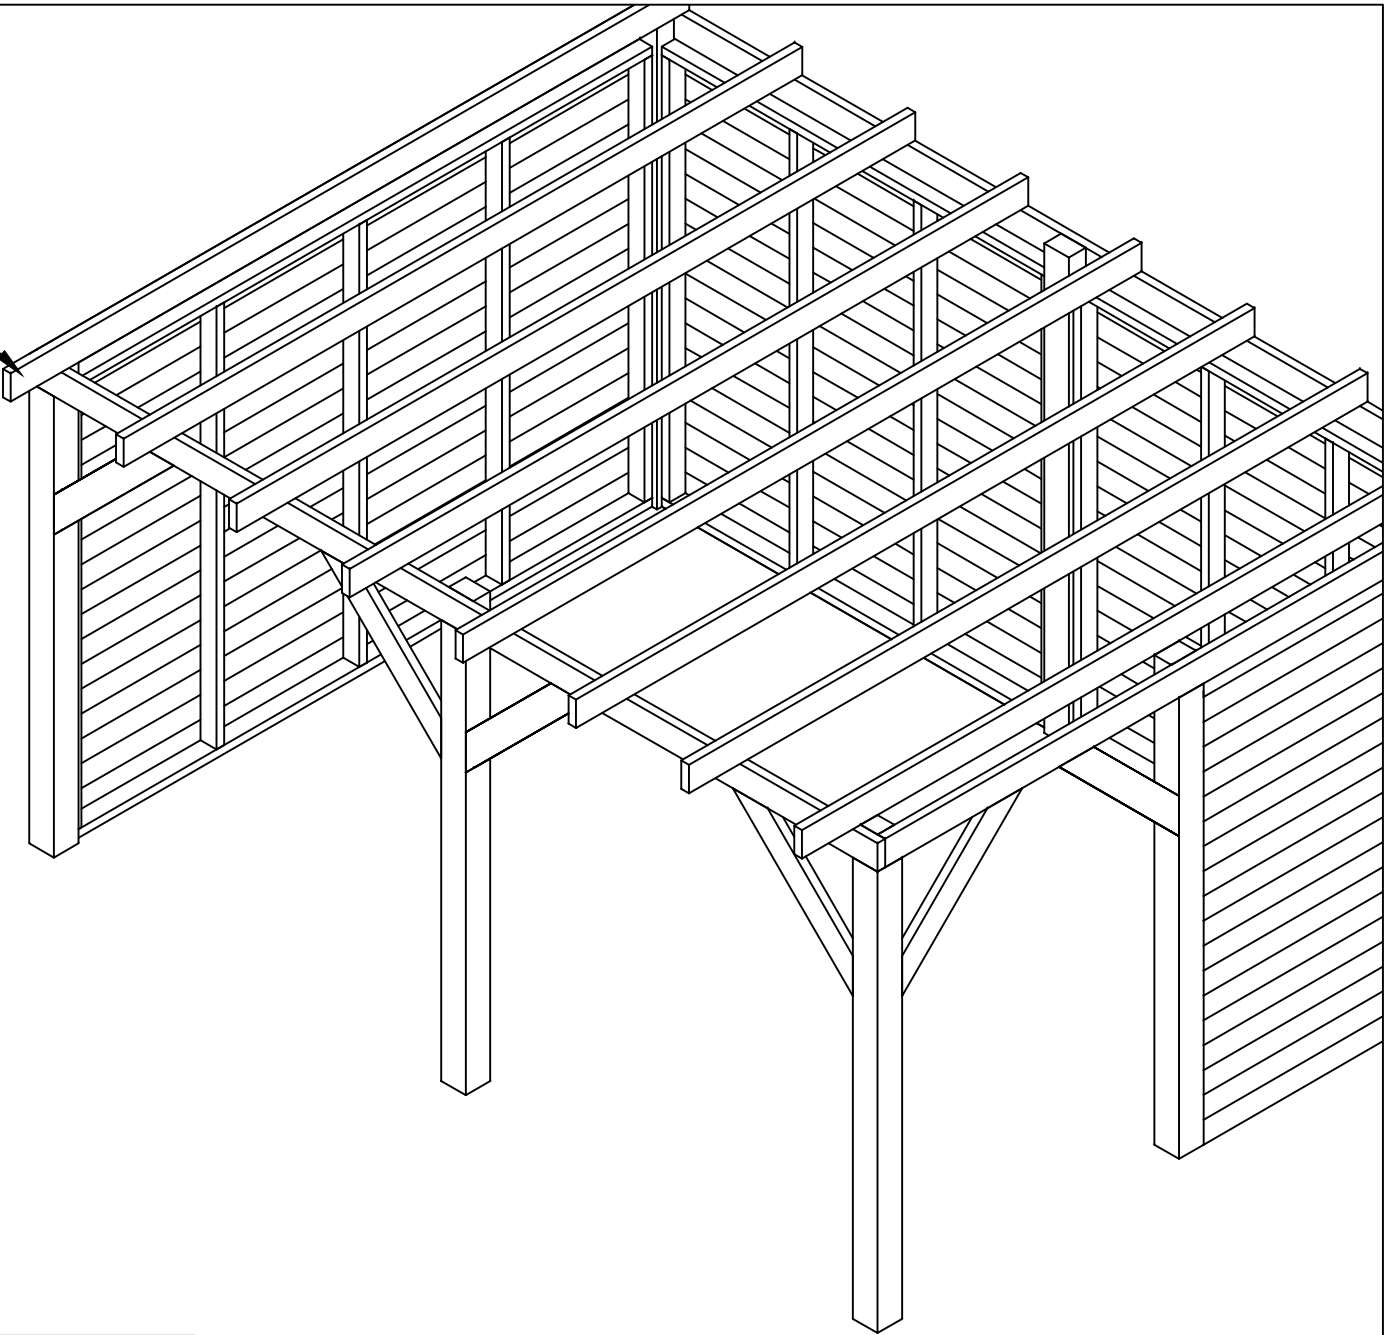

20x  Ø6x200


E2b

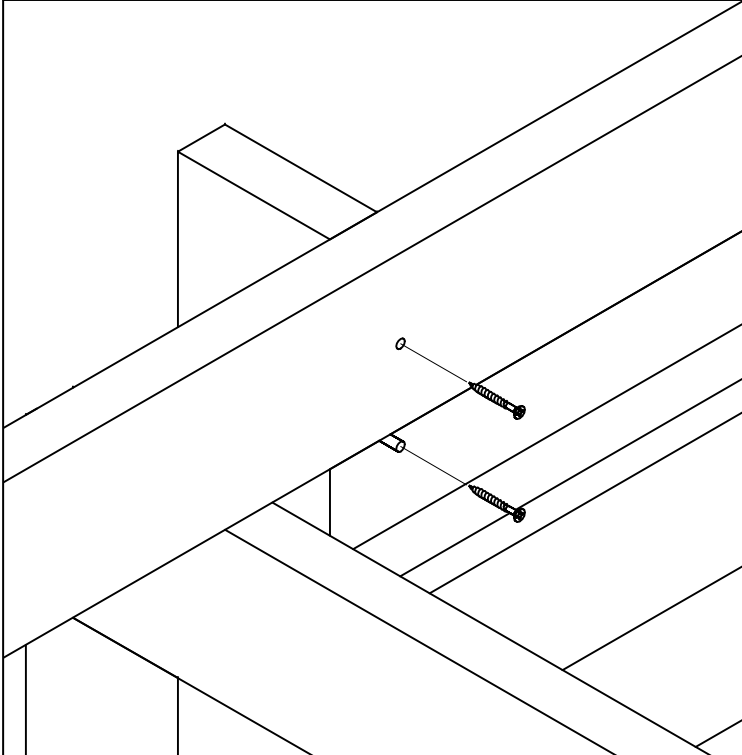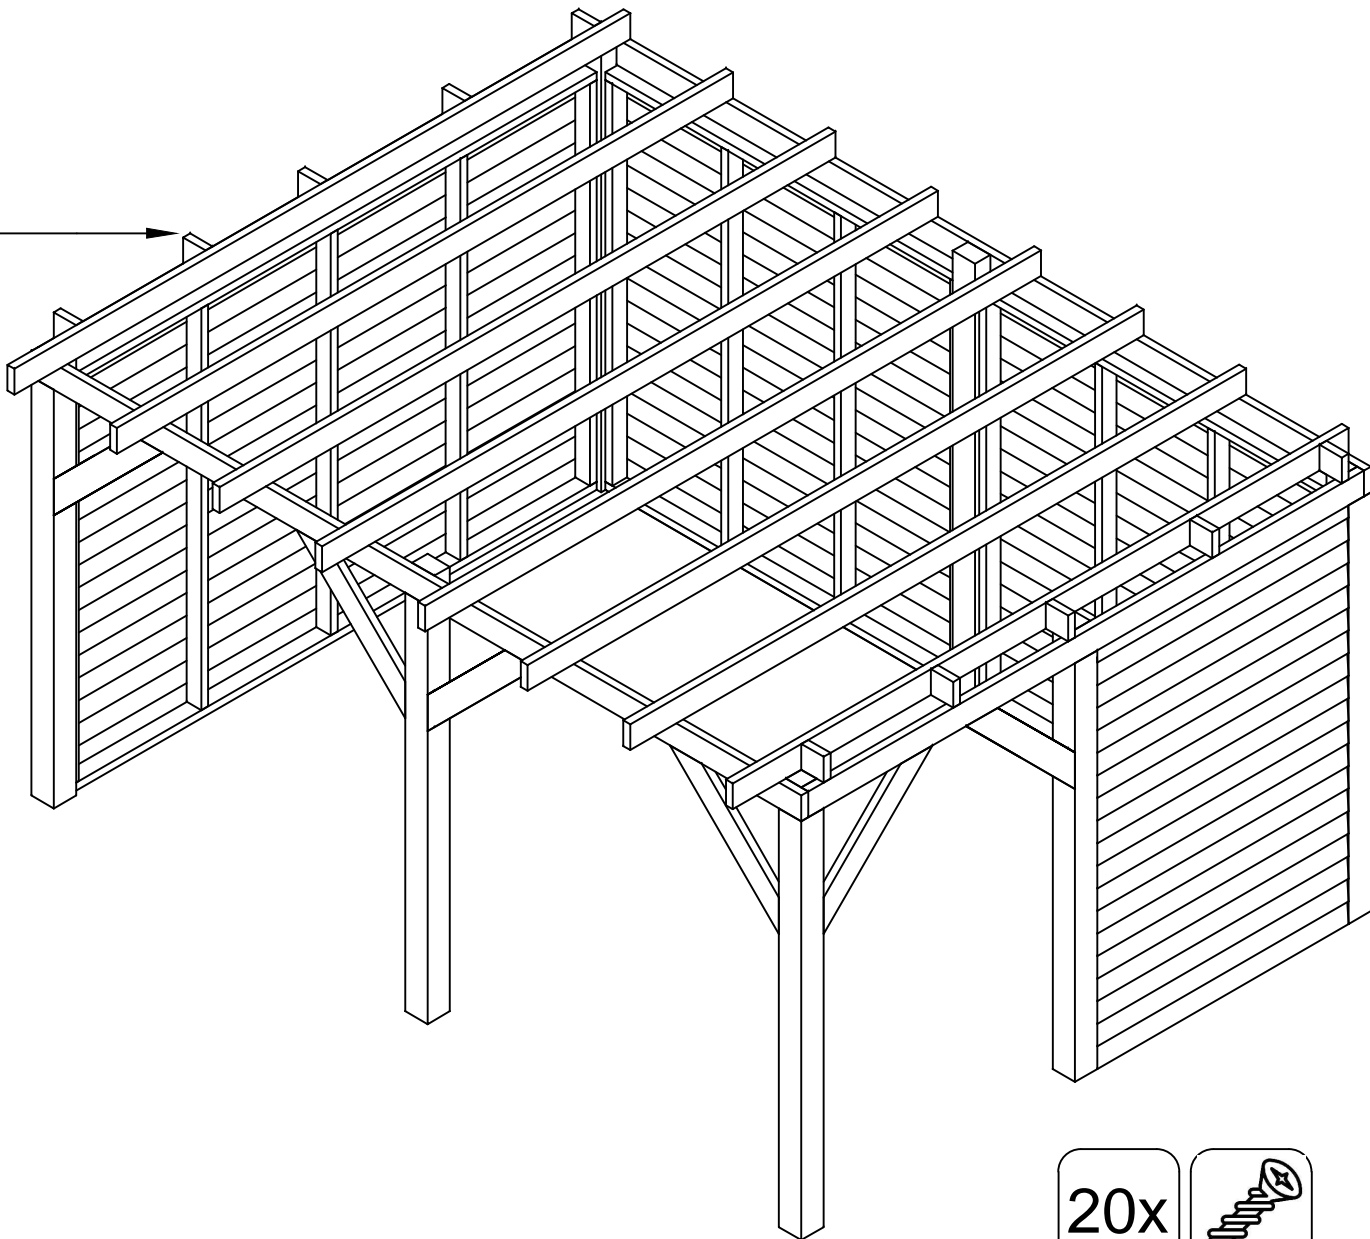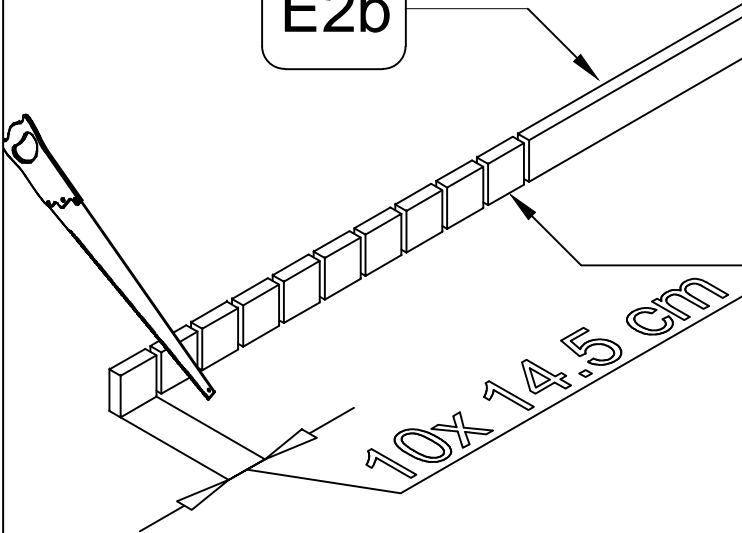

20x 
Ø5x90

31x E5

250x
Ø4x40

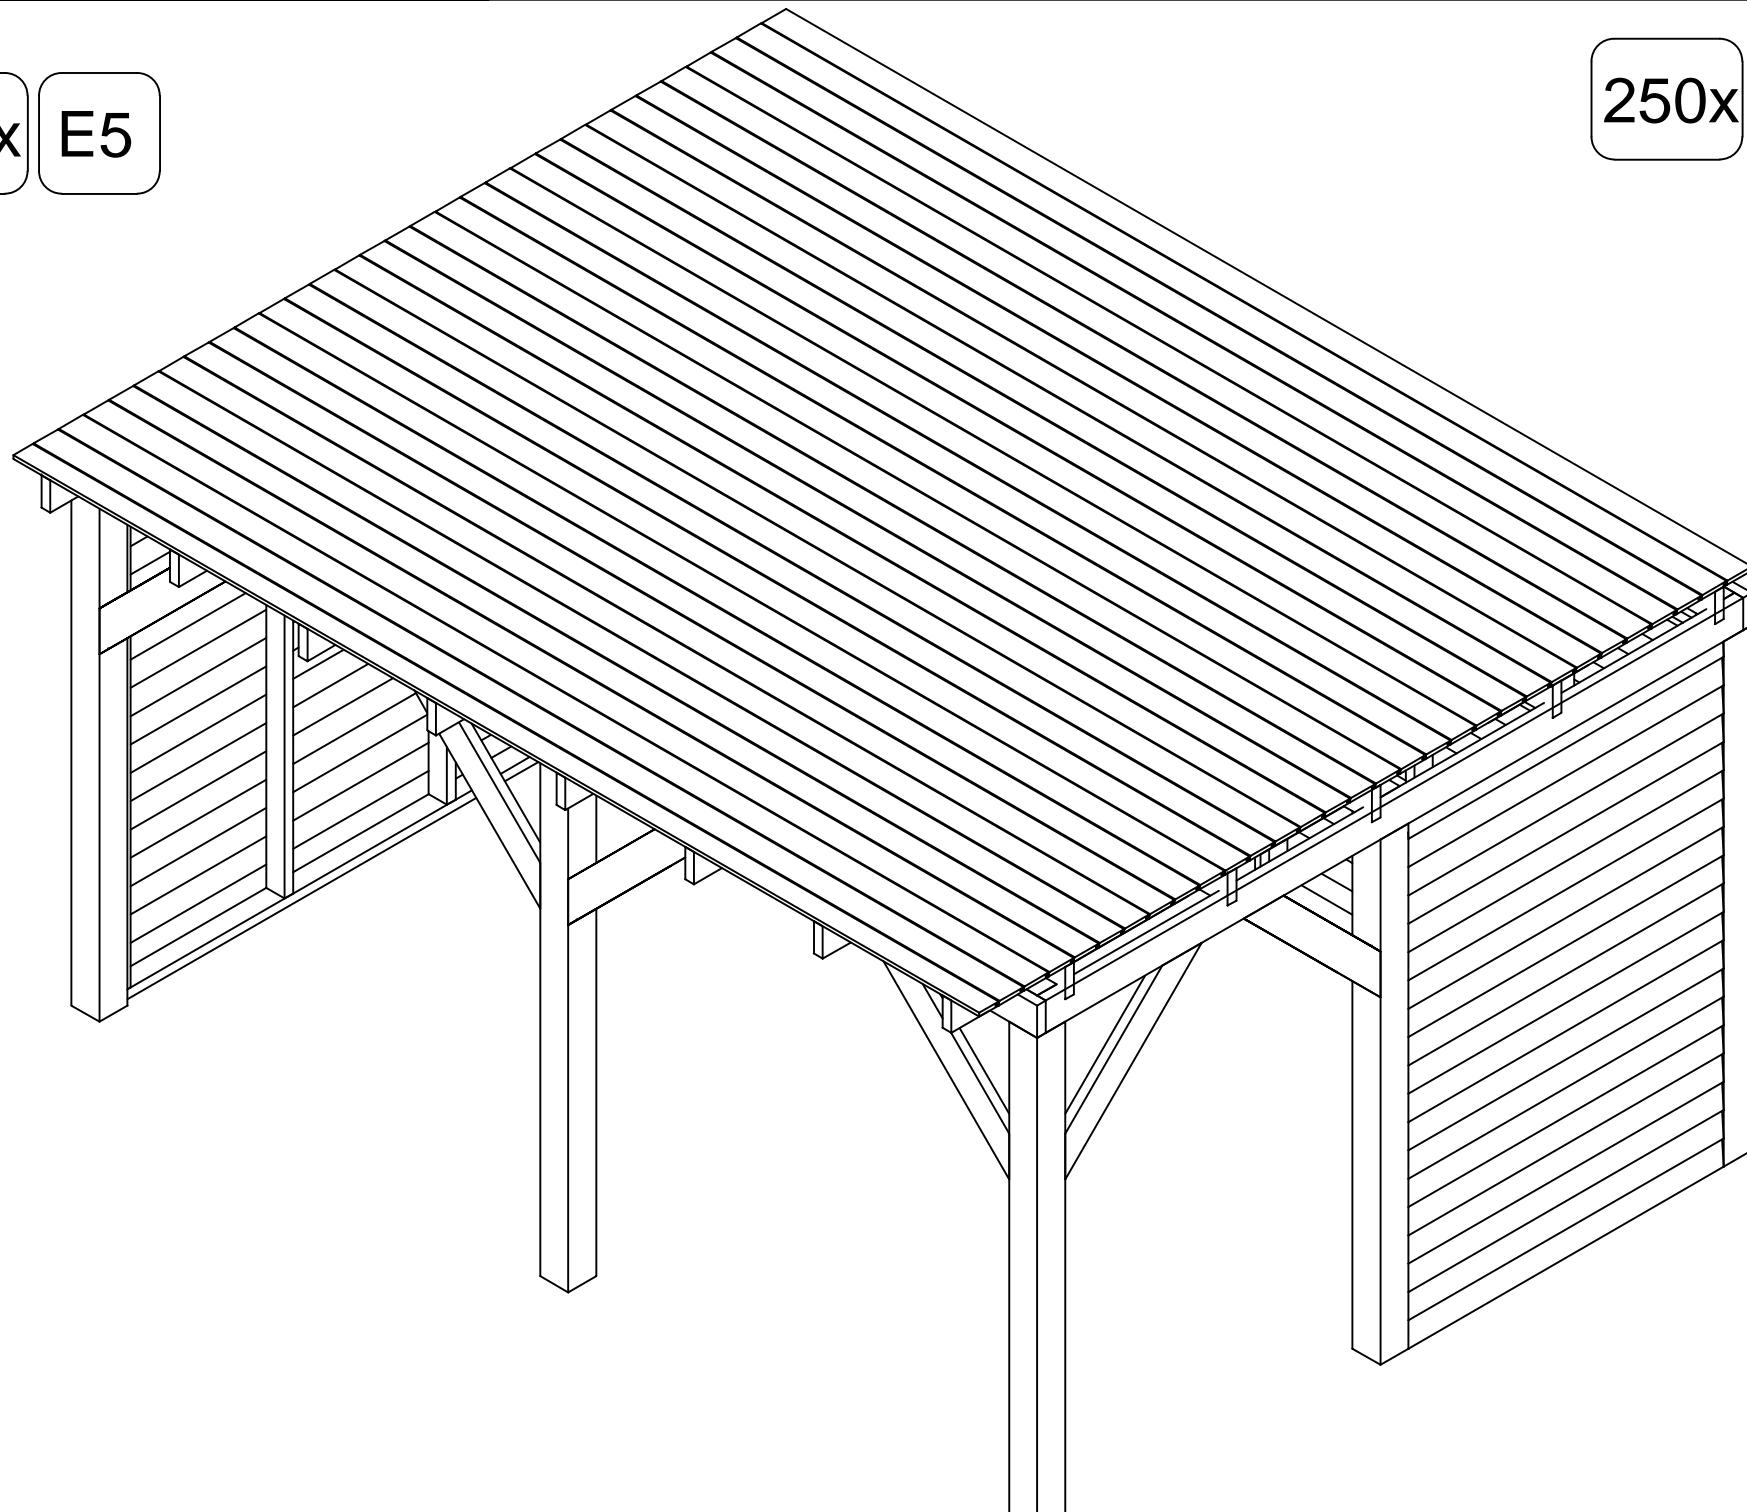


5x


E6

30x



Ø4x40

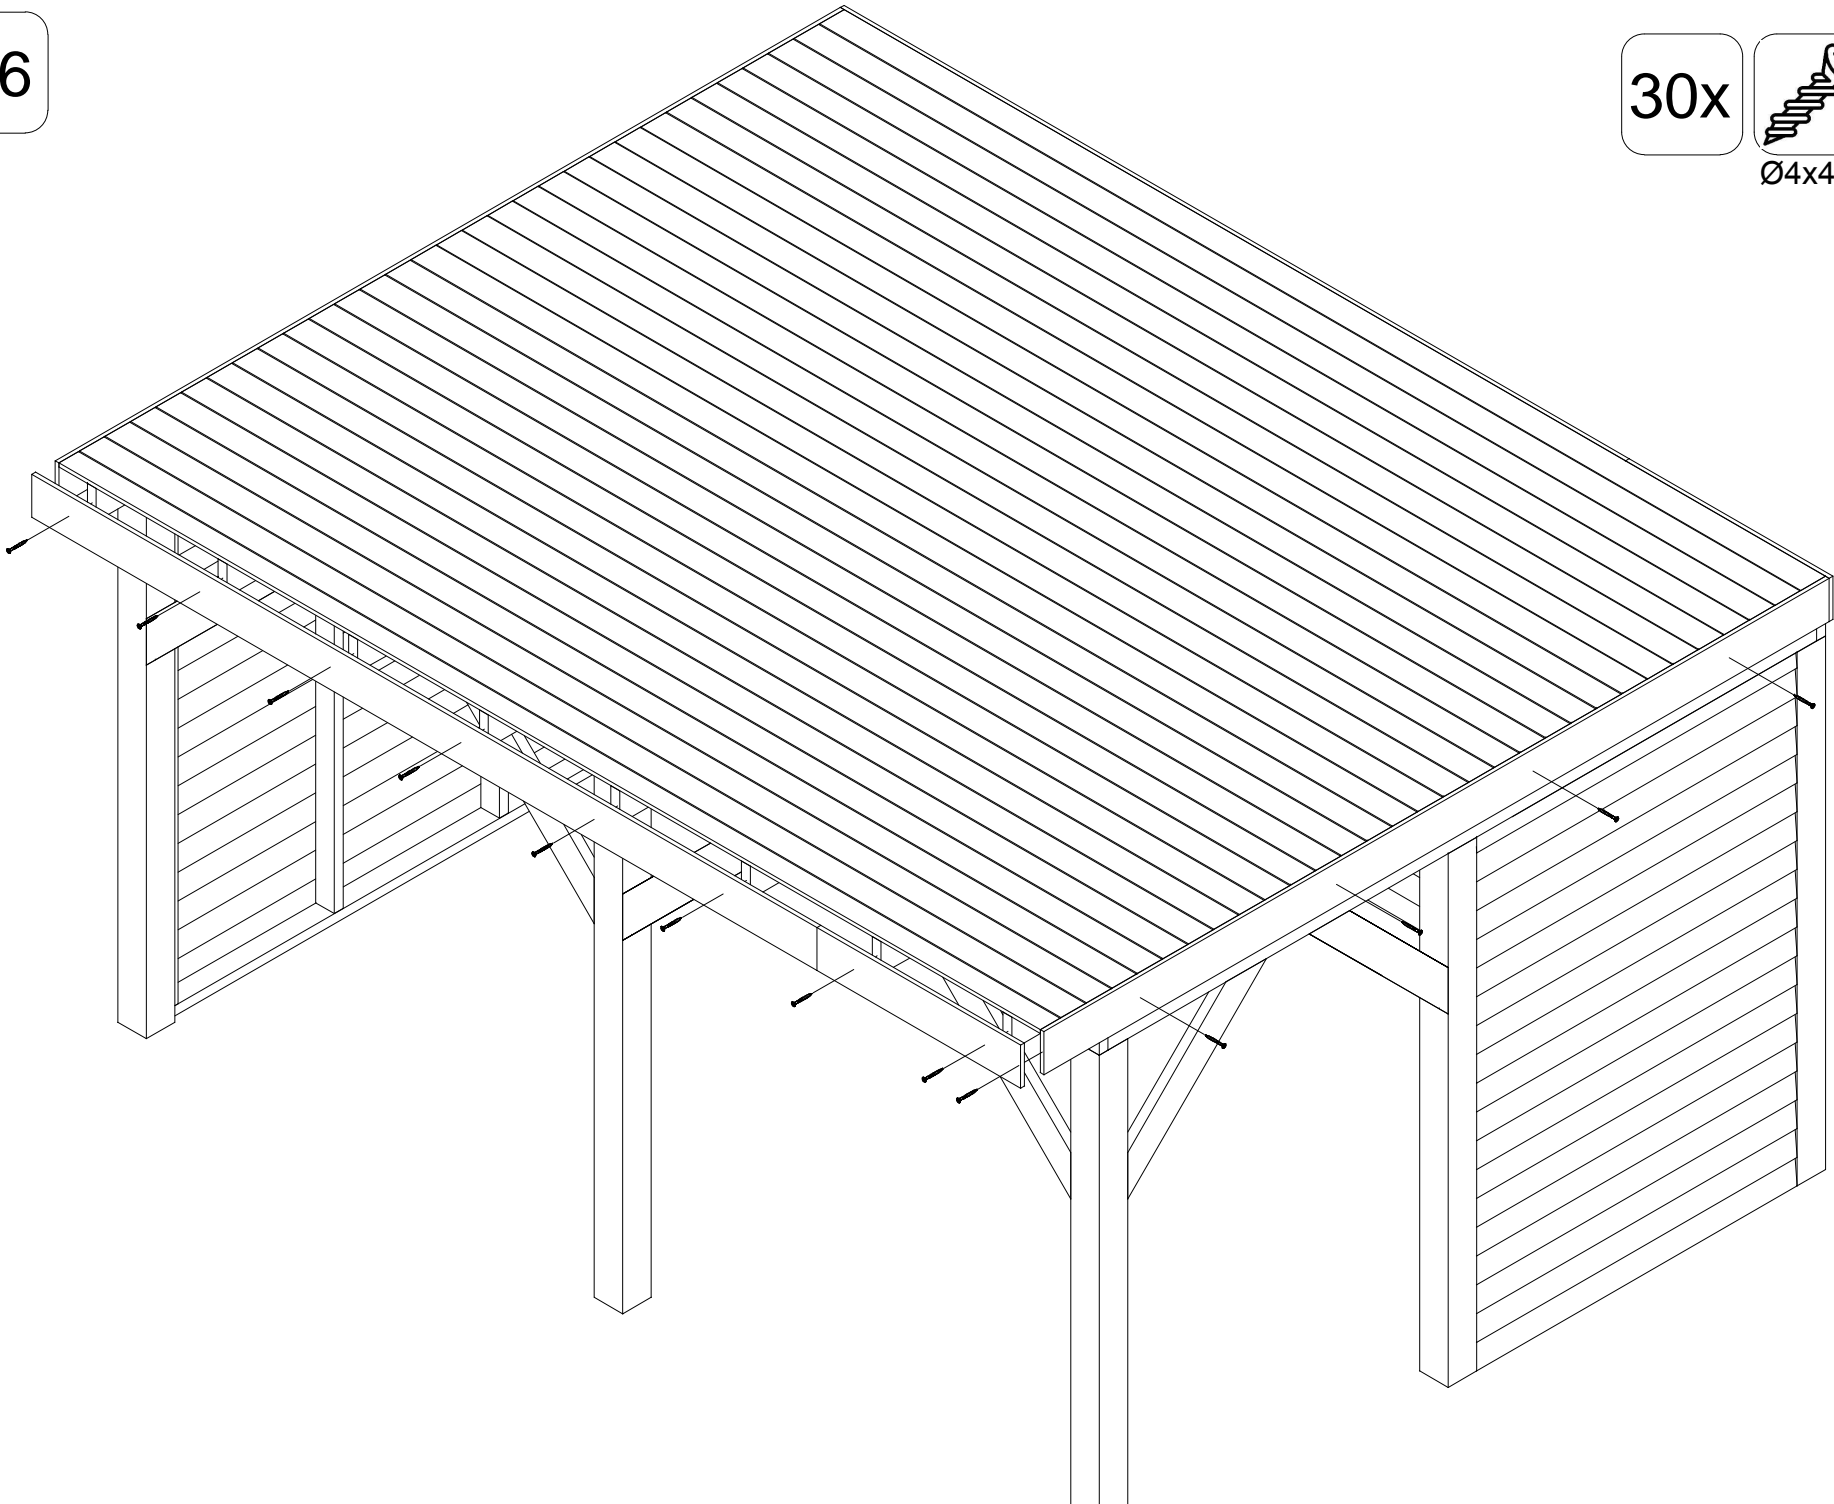

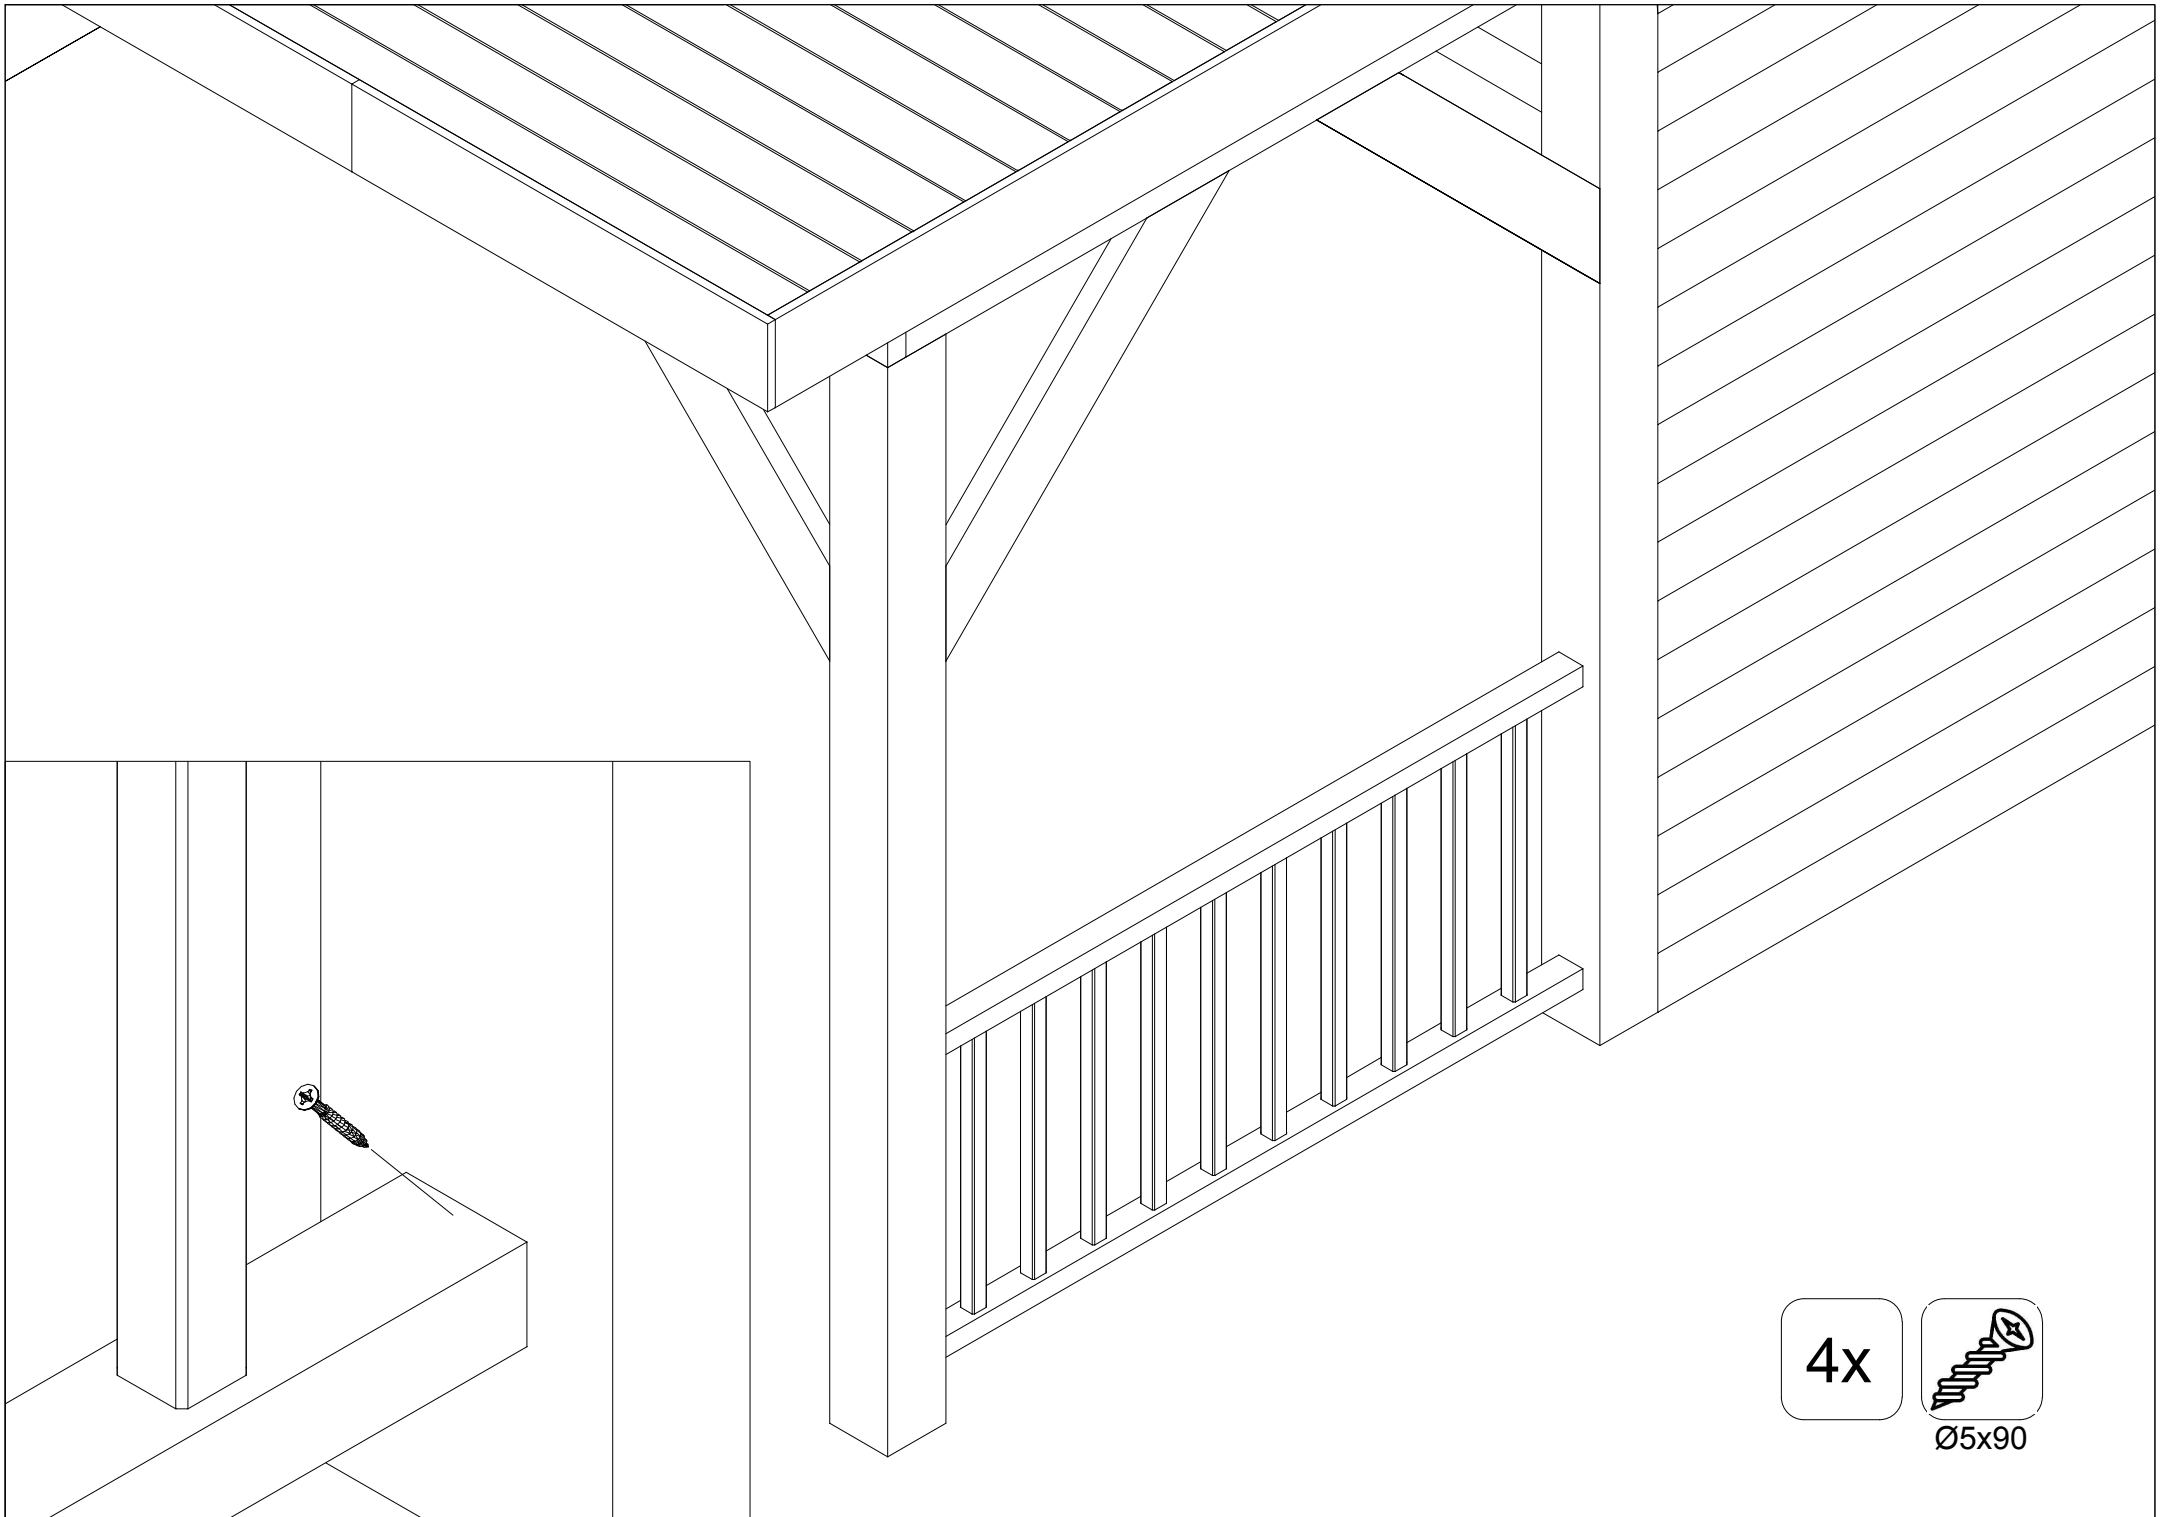

4x



Ø5x90